




N•C CARPET BINDING & EQUIPMENT CORP.

858 Summer Avenue • Newark, New Jersey 07104
PHONE: 973-481-3500 • TOLL FREE: 1-800-526-1184
FROM CANADA: 1-800-336-1184 • FAX: 973-481-0839
<http://www.n-ccarpet.com> Email: sales@nccarpet.com


PARTS LIST FOR SERIES 467B CLIPPER HEAD

Parts must be ordered by part number, name, model and serial number of machine.

NEW STYLE PARTS

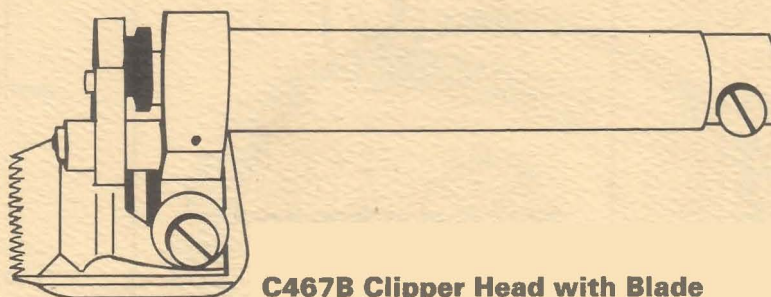


C467B Clipper Head with Blade

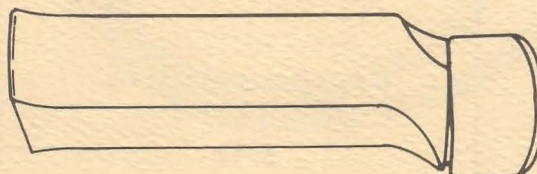

C136R Suction Tube


Use on 01 machines.

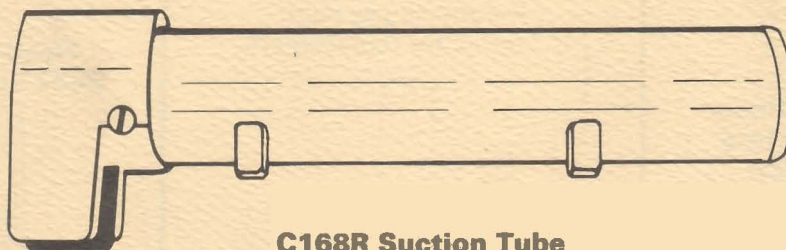

C168R Suction Tube

Use on 02 machines.

C474 Hose Clamp

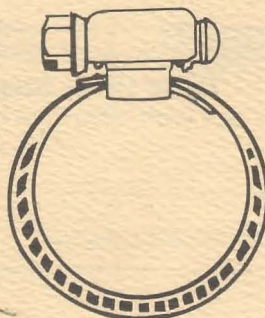





PARTS LIST FOR SERIES 467B CLIPPER HEAD

Parts must be ordered by part number, name, model and serial number of machine.

C129C Rug Blade
Complete Assembly.

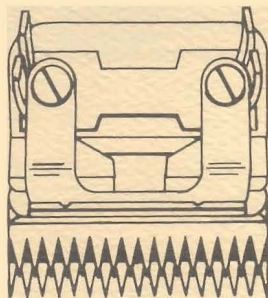

C130 Tension Spring

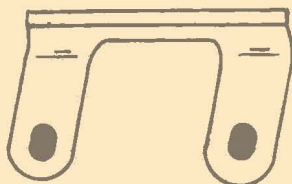

C129 Blade Bracket



**C15A
Blade
Screw**



**C127 Blade
Mounting
Screw**



C445N Rocker Arm



C447 Rocker Arm Bearing




C440 Retaining Ring
Use on 444.



C444 Pivot Pin
Return clipper head
to factory for replacement.




C137 Clamp

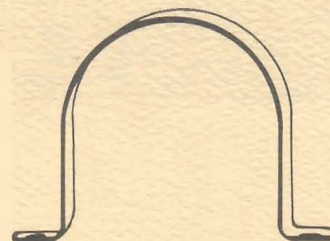

C307 Screw
Use with 137.



C34A Clipper Head Bearings
Return clipper head to factory for
replacement.

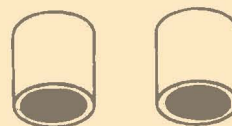

Flexible Shaft Screws
C432 For models 01 and 02.



C482N Drive Bushing



C488 Drive Shaft
For use with 482 drive bushing.



C39B Retaining Ring





PARTS LIST FOR SERIES 467B CLIPPER HEAD

Parts must be ordered by part number, name, model and serial number of machine.

DO

C45M-60" Flexible Shaft



Rug Clipper Motor

C46B7512R-49A 115 volts

C46B7512R2-49A 230 volts

C49A Motor Coupling

Replace old style 439 with C49A kit.

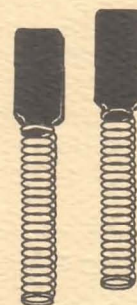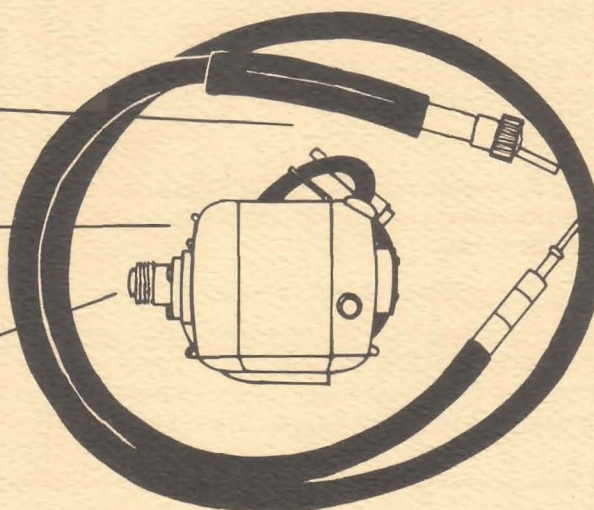

C46B10N Brush

For clipper motor.


S14 Clipper Lube



Clipper Motor Control

C459-1 115 volt



C459-2 230 volt

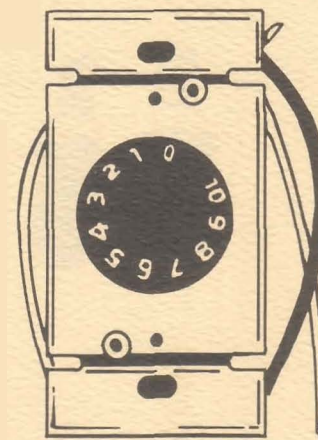

Cleaning Brush

C240A Long

C217 Short





PARTS LIST FOR SERIES 467B CLIPPER HEAD

Parts must be ordered by part number, name, model and serial number of machine.

MAINTENANCE FOR 467B CLIPPER HEAD

Lubricate blades and drive parts often enough to keep blades from chattering. Use S14 Clipper Blade Lube. Turn off machine when spraying head to avoid pulling Clipper Blade Lube into suction motor. **DO NOT USE WD40, OSTER CLIPPER BLADE COOLANT OR SILICONE SPRAY.**

CLIPPER BLADES ARE FRAGILE AND SHARP. KEEP FINGERS AWAY FROM BLADE WHEN MACHINE IS OPERATING. ALWAYS WEAR EYE PROTECTION.

Return clipper blades to factory for sharpening and replacement of broken and worn parts. Unless otherwise requested, upper and lower cutters will be replaced if teeth are broken.

CLIPPER HEAD SERVICING (every 3 months)

Remove rocker arm, drive bushing and flexible shaft lock screw. Sleeve and drive shaft will slide out. Clean all parts including bearings inside clipper head in kerosene or its equivalent. Use C240A cleaning brush. Dry and relubricate all parts including bearings with S14 Clipper Blade Lube.

MAINTENANCE FOR CLIPPER MOTOR

Motor will stop when brushes are worn. Unscrew black cap, pull out brushes and replace with C46B10N.

MAINTENANCE FOR SUCTION MOTOR


D737 Brushes

Motor will stop when brushes are worn. Remove yellow cap and loosen screw. Pull out brushes and replace.

DF3 Filter

Change regularly (every 1-3 months). Pores of filter become clogged causing motor to overheat.

D737 Brushes

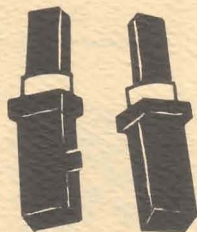

DF3 Filter

