
ILLUSTRATED PARTS LIST

MACHINES


300U101B

UPPER SHAFT ASSEMBLY

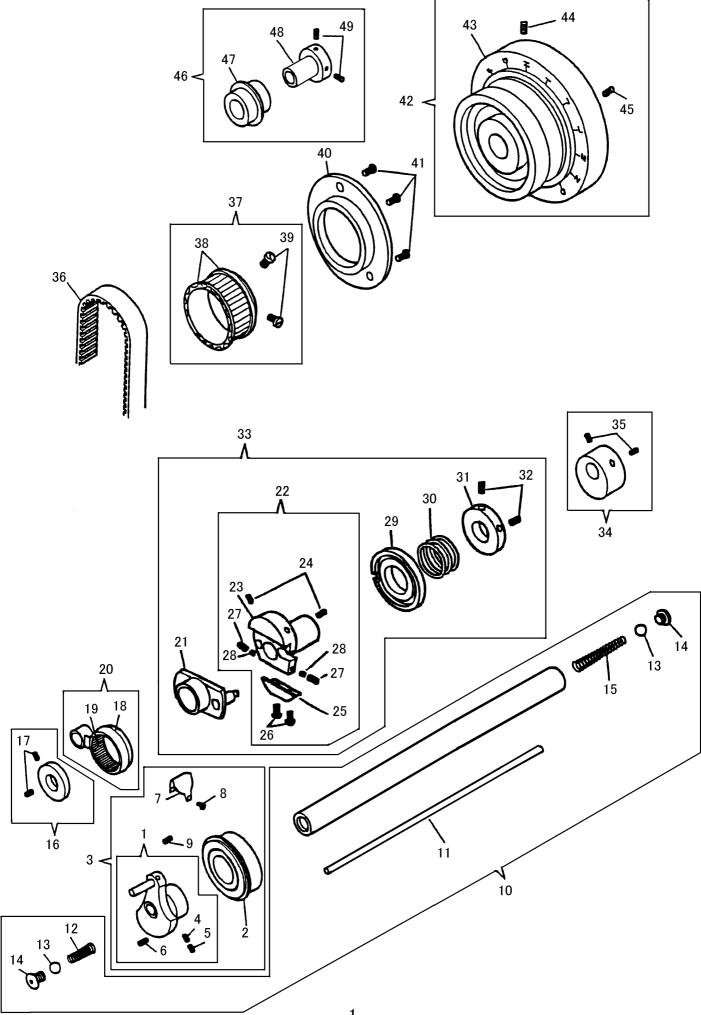


NO.	PART NO.	DESCRIPTION
1	K415133	NEEDLE BAR CRANK WITH K500272-833, K544358 AND K549024
2	K32848	ARM SHAFT BALL BEARING (FRONT)
3	K281209	NEEDLE BAR CRANK COMPLETE, NOS. K415133 AND K32848
4	K549024	NEEDLE BAR CRANK POSITION SCREW
5	K544358	NEEDLE BAR CRANK POSITION SCREW CHECK SCREW
6	K500272 -833	NEEDLE BAR CRANK SET SCREW
7	K281206	NEEDLE BAR CRANK COVER
8	K545205 -451	NEEDLE BAR CRANK COVER SCREW (2)
9	K281258	NEEDLE BAR CRANK OIL PACKING (WIĆK)
10	K415128	ARM SHAFT WITH K268009, K268044, K268264, TWO EACH K268214 AND K414578
11	K268264	ARM SHAFT OIL CONTROL ROD (WOOD)
12	K268009	ARM SHAFT OIL STOP BALL SPRING (FRONT)
13	K268214	ARM SHAFT OIL STOP BALL 5/32 IN. DIA. (2)
14	K414578	ARM SHAFT OIL STOP BALL SCREW (2)
15	K268044	ARM SHAFT OIL STOP BALL SPRING (REAR)
16	K415308	LIFTING ECCENTRIC SPACING COLLAR WITH TWO K414529
17	K414529	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC SPACING COLLAR SET SCREW (2)
18	K267608	NEEDLE BAR ROCK FRAME DRIVING CONNECTION
19	K271055	NEEDLE BAR ROCK FRAME DRIVING CONNECTION NEEDLE BEARING
20	K267609	NEEDLE BAR ROCK FRAME DRIVING CONNECTION K267608 WITH K271055
21	KE0004	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC
22	K415073	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE K415074 WITH K267623 AND TWO EACH K241763, K414555 K414557 AND K374008
~~~	1/ 1/ 507 /	K414555, K414557 AND K374098
23	K415074	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE
24 25	K414555	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE SET SCREW (2) NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE
25 26	K267623 K374098	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW (2)
20	K374098 K414557	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW (2) NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2)
27	K414557 K241763	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2) NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW PACKING (BACK) (2)
20	K268065	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC
30	K268066	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING
31	K412011	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR WITH TWO K544325
32	K544325	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)
33	KE0003	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND
		K415073
34	K281256	COUNTERBALANCE WITH TWO K544208-005
35	K544208 -005	COUNTERBALANCE SET SCREW (2)
36	K268270	ARM SHAFT CONNECTION BELT (REINFORCED NEOPRENE)
37	K281290	ARM SHAFT CONNECTION BELT PULLEY WITH TWO EACH K414546 AND K202253
38	K202253	ARM SHAFT CONNECTION BELT PULLEY SPRING FLANGE (2)
39	K414546	ARM SHAFT CONNECTION BELT PULLEY SET SCREW (2)
40	K268004 -451	ARM SHAFT BALL BEARING (BACK) HOUSING
41	K544336	ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)
42	K281296 -467	MACHINE PULLEY WITH K414525 AND K414526
43	K281297 -467	MACHINE PULLEY
44	K414525	MACHINE PULLEY SET SCREW
45	K414526	MACHINE PULLEY POSITION SCREW
46	K281294	ARM SHAFT THRUST COLLAR WITH K272142, K281295-001 AND TWO K544209-005
47	K272142	ARM SHAFT BALL BEARING (BACK)
48	K281295 -001	ARM SHAFT THRUST COLLAR
49	K544209 -005	ARM SHAFT THRUST COLLAR SET SCREW (2)
L		

## FRONT ASSEMBLY SEWING ARM

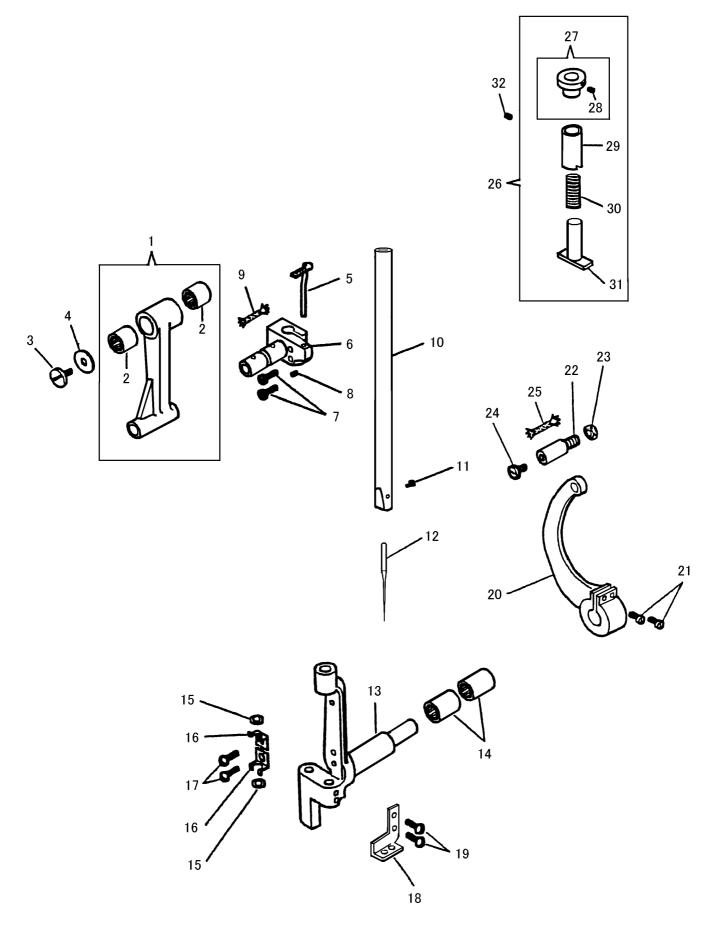


NO.	PART NO.	DESCRIPTION
1	K268056	NEEDLE BAR CONNECTING LINK WITH TWO K270266
2	K270266	NEEDLE BAR CONNECTING LINK NEEDLE BEARING (2)
3	K414517	NEEDLE BAR CONNECTING LINK CAP WASHER SCREW
4	K268139	NEEDLE BAR CONNECTING LINK CAP WASHER
5	K268512	NEEDLE THREAD GUIDE (ON NEEDLE BAR CONNECTING STUD)
6	K415053	NEEDLE BAR CONNECTING STUD WITH K202330, K414545 AND TWO K414511
7	K414511	NEEDLE BAR CONNECTING STUD PINCH SCREW (2)
8	K414545	NEEDLE THREAD GUIDE (ON NEEDLE BAR CONNECTING STUD) SET SCREW
9	K202330	NEEDLE BAR CONNECTING STUD OIL PACKING (WICK)
10	K281912	NEEDLE BAR
11	K414519	NEEDLE SET SCREW
12	KN3260-01 -22	NEEDLE (62X57) SIZE 22
13	K415038	NEEDLE BAR ROCK FRAME
14	K268029	NEEDLE BAR ROCK FRAME NEEDLE BEARING (2)
15	K268144	NEEDLE BAR OILING FELT (2)
16	K268278	NEEDLE BAR OILING FELT HOLDER (2)
17	K414522	NEEDLE BAR OILING FELT HOLDER SCREW (2)
18	K268219	NEEDLE BAR ROCK FRAME THREAD GUIDE
19	K414539	NEEDLE BAR ROCK FRAME THREAD GUIDE SCREW (2)
<u>20</u> 21	K415089 -451	
21 22	K414509 K415092	NEEDLE BAR ROCK FRAME DRIVING ARM PINCH SCREW (2) NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD WITH K268258
22	K541197	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STOD WITH R200200
23 24	K545297	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STOD NOT
24 25	K268258	NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW
26	K415098	NEEDLE BAR ROCK FRAME REGULATING STUD COMPLETE, NOS. K214529, K415099, K268148 AND K268149
20	K415099	NEEDLE BAR ROCK FRAME REGULATING STUD CAP WITH K414528
28	K414528	NEEDLE BAR ROCK FRAME REGULATING STUD CAP SET SCREW
29	K268149	NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE
30	K214529	NEEDLE BAR ROCK FRAME REGULATING STUD SPRING
31	K268148	NEEDLE BAR ROCK FRAME REGULATING STUD
32	K414527	NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE SET SCREW
L		

## EXTERNAL PARTS SEWING ARM

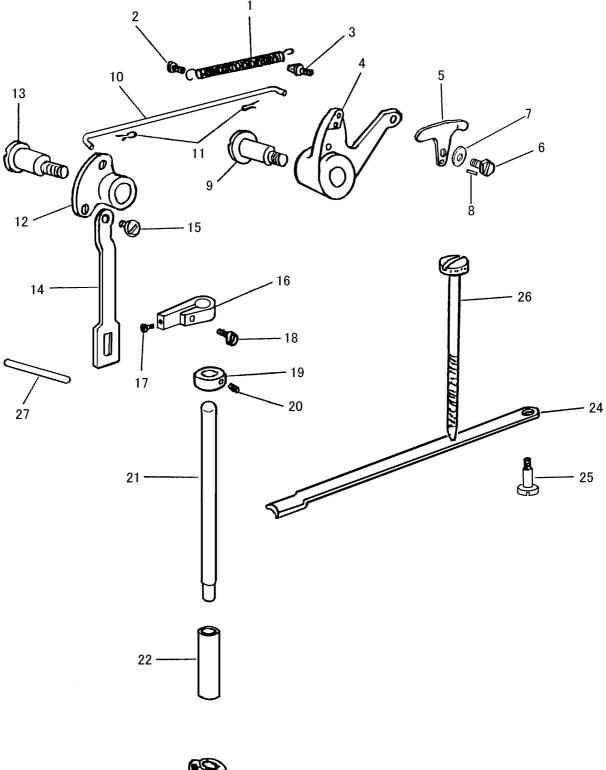


NO.	PART NO.	DESCRIPTION
1	K204348	FOOT LIFTER LEVER SPRING
2	K414555	FOOT LIFTER LEVER SPRING SCREW
3	K414570	FOOT LIFTER LEVER SPRING SCREW EYE
4	K415104 -451	FOOT LIFTER LEVER WITH K543850-001
5	K267707	NEEDLE THREAD TENSION RELEASING PLATE
6	K414531	NEEDLE THREAD TENSION RELEASING PLATE SCREW
7	K543804 -004	NEEDLE THREAD TENSION RELEASING PLATE SCREW WASHER
8	K543850 -001	NEEDLE THREAD TENSION RELEASING PLATE PIN
9	K201363	FOOT LIFTER LEVER HINGE SCREW
10	K268086	FOOT LIFTER LEVER ROD
11	K248423	FOOT LIFTER LEVER ROD COTTER PIN (2)
12	K415102 -451	FOOT LIFTER LEVER BELL CRANK
13	K414572	FOOT LIFTER LEVER BELL CRANK HINGE SCREW
14	K269616	FOOT LIFTER LIFTING LINK
15	K414568	FOOT LIFTER LIFTING LINK HINGE SCREW
16	K415057	PRESSER BAR GUIDE BRACKET WITH K414513 AND K414535
17	K414535	PRESSER BAR GUIDE BRACKET ADJUSTING SCREW
18	K414513	PRESSER BAR GUIDE BRACKET PINCH SCREW
10	K415055	PRESSER BAR STOP COLLAR WITH K414529
20	K414529 K268172	PRESSER BAR STOP COLLAR SET SCREW
21		PRESSER BAR
22	K268173	PRESSER BAR BUSHING
23	K268613	PRESSER FOOT COMPLETE
24	K268176	PRESSER BAR SPRING
25	K414562	PRESSER BAR SPRING SUPPORT SCREW
26	K414574	PRESSER BAR SPRING ADJUSTING SCREW
27	K415360	FOOT LIFTER LIFTING LINK STOP PIN
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		

## LOWER SHAFT ASSEMBLY

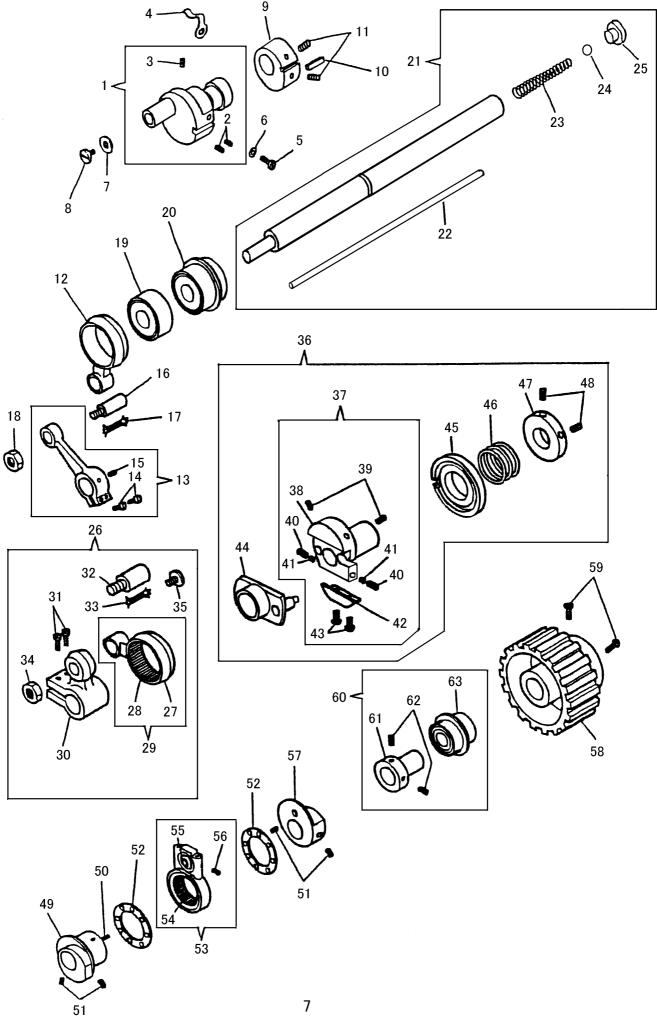


NO.	PART NO.	DESCRIPTION
1	K415176	LOOPER DRIVING CRANK WITH K500264-833 AND TWO K374099
2	K374099	LOOPER DRIVING CRANK POSITION SCREW (2)
3	K500264 -833	LOOPER DRIVING CRANK SET SCREW
4	K268102	LOOPER DRIVING CRANK OIL HOLE COVER
5	K414563	LOOPER DRIVING CRANK OIL HOLE COVER SCREW
6 7	K204925 K418465	LOOPER DRIVING CRANK OIL HOLE COVER SCREW WASHER LOOPER DRIVING CONNECTION WASHER
8	K544213 -001	LOOPER DRIVING CONNECTION WASHER
9	K415210	FEED LIFTING ECCENTRIC WITH K268077 AND TWO K544208-005
10	K268077	FEED LIFTING ECCENTRIC LUBRICATING PAD (WOOD)
11	K544208 -005	FEED LIFTING ECCENTRIC SET SCREW (2)
12	K268074	FEED LIFTING CONNECTION
13	K415206	FEED LIFTING ROCK SHAFT CRANK WITH K414549 AND TWO K414511
14	K414511	FEED LIFTING ROCK SHAFT CRANK PINCH SCREW (2)
15	K414549	FEED LIFTING ROCK SHAFT CRANK POSITION SCREW
16	K415092	FEED LIFTING CONNECTION HINGE STUD
17	K268258	FEED LIFTING CONNECTION HINGE STUD OIL PACKING (WICK)
18 19	K541197 K281216	FEED LIFTING CONNECTION HINGE STUD NUT BED SHAFT BALL BEARING
20	K281210	BED SHAFT BALL BEARING
20	K281212	BED SHAFT BALE BEAKING BED SHAFT WITH K268044, K268214, K268265 AND K414578
22	K268265	BED SHAFT OIL CONTROL ROD (WOOD)
23	K268044	BED SHAFT OIL STOP BALL SPRING
24	K268214	BED SHAFT OIL STOP BALL 5/32 IN. DIA.
25	K414578	BED SHAFT OIL STOP BALL SCREW
26	K415215	FEED DRIVING ROCK SHAFT CRANK K415213 WITH K267609, K415091, K541197 AND K545297
27	K267608	
28	K271055	FEED DRIVING CONNECTION NEEDLE BEARING
29	K267609	FEED DRIVING CONNECTION K267608 WITH K271055
<u>30</u> 31	K415213 K414511	FEED DRIVING ROCK SHAFT CRANK WITH TWO K414511 FEED DRIVING ROCK SHAFT CRANK PINCH SCREW (2)
32	K414511 K415092	FEED DRIVING CONNECTION HINGE STUD
33	K268258	FEED DRIVING CONNECTION HINGE STUD OIL PACKING (WICK)
34	K541197	FEED DRIVING CONNECTION HINGE STUD NUT
35	K545297	FEED DRIVING CONNECTION CAP SCREW
36	KE0003	FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K415073
37	K415073	FEED DRIVING ECCENTRIC FLANGE K415074 WITH K267623 AND TWO EACH K241763, K414555, K414557 AND
	1445074	
38	K415074	
39 40	K414555 K414557	FEED DRIVING ECCENTRIC FLANGE SET SCREW (2) FEED DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2)
41	K241763	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW PACKING (BRASS) (2)
42	K267623	FEED DRIVING ECCENTRIC FRICTION PLATE
43	K374098	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW (2)
44	KE0004	FEED DRIVING ECCENTRIC
45	K268065	FEED DRIVING ECCENTRIC ADJUSTING DISC
46	K268066	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING
47	K412011	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR WITH TWO K544325
48 49	K544325 K415187	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2) SPREADER DRIVING ECCENTRIC WITH K543808-002 AND TWO K414528
49 50	K543808 -002	SPREADER DRIVING ECCENTRIC WITH K543808-002 AND TWO K414528 SPREADER DRIVING ECCENTRIC PIN
51	K414528	SPREADER DRIVING ECCENTRIC SET SCREW (2)
51	K414528	SPREADER DRIVING ECCENTRIC COUNTERBALANCE SET SCREW (2)
52	K268220	SPREADER DRIVING ECCENTRIC THRUST WASHER (2)
53	K281246	SPREADER DRIVING CONNECTION WITH K415368, K281248 AND K544201-001
54	K415368	SPREADER DRIVING CONNECTION NEEDLE BEARING
55	K281248	SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER
56	K544203 -001	SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER SET SCREW
57 58	K415190	SPREADER DRIVING ECCENTRIC COUNTERBALANCE WITH TWO K414528
58 59	K281292 K414546	BED SHAFT CONNECTION BELT PULLEY WITH TWO 414546 BED SHAFT CONNECTION BELT PULLEY SET SCREW (2)
60	K281294	BED SHAFT CONNECTION BEET FOLLET SET SCREW (2) BED SHAFT THRUST COLLAR WITH K281295-001, K272142 AND TWO K544209-005
61	K281295 -001	BED SHAFT THRUST COLLAR
62	K544209 -005	BED SHAFT THRUST COLLAR SET SCREW (2)
63	K272142	BED SHAFT THRUST COLLAR BEARING

#### FRONT ASSEMBLY SEWING BED

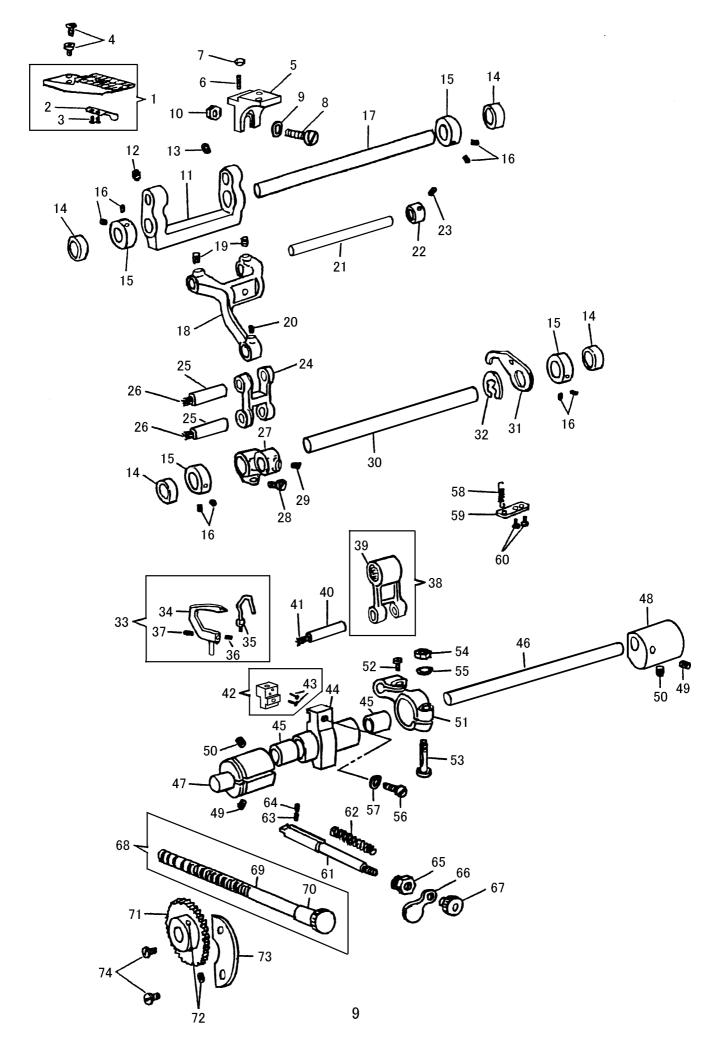


NO.	PART NO.	DESCRIPTION
1	K268618	FEED DOG WITH K268318 AND TWO K229
2	K268318	
3 4	K229 K414518	LOOP DEFLECTOR SCREW (2) FEED DOG SCREW (2)
5	K415208	FEED DOG SHANK WITH K414559 AND K541200
6	K414559	FEED DOG SHANK ADJUSTING SCREW
7	K541200	FEED DOG SHANK ADJUSTING SCREW LOCK NUT
8 9	K414520 K543804 -004	FEED DOG SHANK SCREW FEED DOG SHANK SCREW WASHER
9 10	K545804 -004 K545489	FEED DOG SHANK SCREW WASHER FEED DOG SHANK SCREW LOCK NUT
11	K415200	FEED DRIVING ROCK FRAME WITH K500264-833 AND K549024
12	K549024	FEED DRIVING ROCK FRAME POSITION SCREW
13	K500264 -833	
14 14	K415297 K415297	FEED DRIVING ROCK SHAFT BUSHING (2) FEED LIFTING ROCK SHAFT BUSHING (2)
15	K415065	FEED DRIVING ROCK SHAFT COLLAR WITH TWO K504020 (2)
15	K415065	FEED LIFTING ROCK SHAFT COLLAR WITH TWO K504020 (2)
16	K504020	FEED DRIVING ROCK SHAFT COLLAR SET SCREW (4)
16 17	K504020 K268070	FEED LIFTING ROCK SHAFT COLLAR SET SCREW (4) FEED DRIVING ROCK SHAFT
18	K415198	FEED BAR WITH K545213 AND TWO K544204-001
19	K544204 -001	FEED BAR SET SCREW (2)
20	K545213	FEED LIFTING LINK HINGE PIN SET SCREW
21 22	K268035 K415202	FEED BAR HINGE PIN FEED BAR HINGE PIN COLLAR WITH K414529
22 23	K415202 K414529	FEED BAR HINGE PIN COLLAR WITH K414529 FEED BAR HINGE PIN COLLAR SET SCREW
24	K268078	FEED LIFTING LINK
25	K268079	FEED LIFTING LINK HINGE PIN WITH K268258 (2)
26 27	K268258	FEED LIFTING LINK HINGE PIN OIL PACKING (WICK) (2)
27 28	K415204 K414501	FEED LIFTING CRANK WITH K414501 AND K545213 FEED LIFTING CRANK PINCH SCREW
29	K545213	FEED LIFTING LINK HINGE PIN SET SCREW
30	K267933	FEED LIFTING ROCK SHAFT
31	K268131	LOOPER THROW-OUT SAFETY LATCH
32 33	K543801 -012 K281208	LOOPER THROW-OUT SAFETY LATCH RETAINING RING LOOPER AND NEEDLE GUARD COMPLETE, NOS. K281207 AND K268380
34	K268380	LOOPER WITH K141478 AND K141494
35	K281207	NEEDLE GUARD
36	K141494	NEEDLE GUARD SET SCREW (BACK)
37 38	K141478 K281223	NEEDLE GUARD SET SCREW (FRONT) LOOPER DRIVING CONNECTION WITH K415500
39	K415500	LOOPER DRIVING CONNECTION BUSHING
40	K268208	LOOPER CARRIER CRANK HINGE PIN WITH K268258
41	K268258	LOOPER CARRIER CRANK HINGE PIN OIL PACKING (WICK)
42 43	K281274 K414558	LOOPER HOLDER WITH TWO K414558 LOOPER SET SCREW (2)
43	K281265	LOOPER CARRIER WITH TWO K415500
45	K415500	LOOPER CARRIER BUSHING (2)
46	K268093	
47 48	K415168 K415170	LOOPER CARRIER SHAFT BUSHING (LEFT) WITH K500264-833 AND K549024 LOOPER CARRIER SHAFT BUSHING (RIGHT) WITH K500264-833 AND K549024
40 49	K549024	LOOPER CARRIER SHAFT BUSHING (RIGHT) WITH R500204-033 AND R549024
50	K500264 -833	LOOPER CARRIER SHAFT BUSHING SET SCREW (2)
51	K415174	LOOPER CARRIER CRANK WITH K414516
52 53	K414516 K415292	LOOPER CARRIER CRANK HINGE PIN PINCH SCREW LOOPER CARRIER CRANK CLAMPING STUD
53 54	K541198	LOOPER CARRIER CRANK CLAMPING STOD
55	K548459	LOOPER CARRIER CRANK CLAMPING STUD WASHER
56	K414750 -002	LOOPER HOLDER SCREW
57 58	K543804 -004 K268132	LOOPER HOLDER SCREW WASHER LOOPER THROW-OUT SAFETY LATCH SPRING
58 59	K268133	LOOPER THROW-OUT SAFETY LATCH SPRING
60	K545205 -451	LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)
61	K415182	LOOPER THROW-OUT GEAR LOCKING PLUNGER
62 63	K250265 K414564	LOOPER THROW-OUT GEAR LOCKING PLUNGER SPRING LOOPER THROW-OUT GEAR LOCKING PLUNGER STOP SCREW
63 64	K414528	LOOPER THROW-OUT GEAR LOCKING PLUNGER STOP SCREW
65	K201477	LOOPER THROW-OUT GEAR LOCKING PLUNGER SCREW BUSHING
66	K268313	LOOPER THROW-OUT GEAR LOCKING PLUNGER HANDLE
67 68	K541453 K415178	LOOPER THROW-OUT GEAR LOCKING PLUNGER THUMB NUT
68 69	K415178 K415179	LOOPER THROW-OUT RACK ROD K415179 WITH K541451 LOOPER THROW-OUT RACK ROD
70	K541451	LOOPER THROW-OUT RACK ROD THUMB NUT
71	K415180	LOOPER THROW-OUT GEAR WITH TWO K500264-833
72 73	K500264 -833	LOOPER THROW-OUT GEAR SET SCREW (2)
73 74	K268096 K414515	LOOPER CARRIER SHAFT BUSHING (LEFT) POSITION PLATE LOOPER CARRIER SHAFT BUSHING (LEFT) POSITION PLATE SCREW (2)

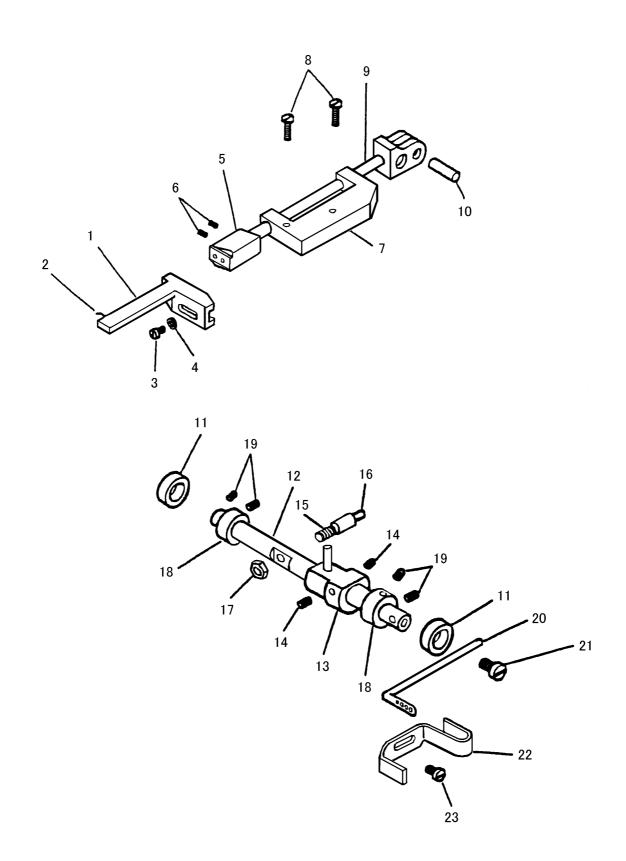


NO.	PART NO.	DESCRIPTION
1	K268638	SPREADER WITH K268162
2	K268162	SPREADER WITH R200102 SPREADER POINT
3	K414552	SPREADER FORM
4	K547670	SPREADER SCREW WASHER
4 5	K415196	SPREADER HOLDER WITH TWO K414529
6	K414529	SPREADER HOLDER SET SCREW (2)
7	K268184	SPREADER BAR BRACKET
8	K414524	SPREADER BAR BRACKET SCREW (2)
9	K268499	SPREADER BAR
10	K268190	SPREADER DRIVING PIN
11	K415297	SPREADER DRIVING ROCK SHAFT BUSHING (2)
12	K415389	SPREADER DRIVING ROCK SHAFT WITH K504019
13	K415194	SPREADER DRIVING CRANK WITH TWO K544204-001
14	K544204 -001	SPREADER DRIVING CRANK SET SCREW (2)
15	K281250	SPREADER DRIVING ROCK SHAFT SCREW STUD
16	K32825	SPREADER DRIVING ROCK SHAFT SCREW STUD OIL PACKING (WICK)
17	K545424	SPREADER DRIVING ROCK SHAFT SCREW STUD NUT
18	K415065	SPREADER DRIVING ROCK SHAFT COLLAR WITH TWO K504020 (2)
19	K504020	SPREADER DRIVING ROCK SHAFT COLLAR SET SCREW (4)
20	K268052	LOOPER THREAD TAKE-UP ROD
21	K504019	LOOPER THREAD TAKE-UP ROD SET SCREW
22	K268051	LOOPER THREAD GUIDE (ON FRONT)
23	K414510	LOOPER THREAD GUIDE SCREW

## EXTERNAL PARTS SEWING ARM

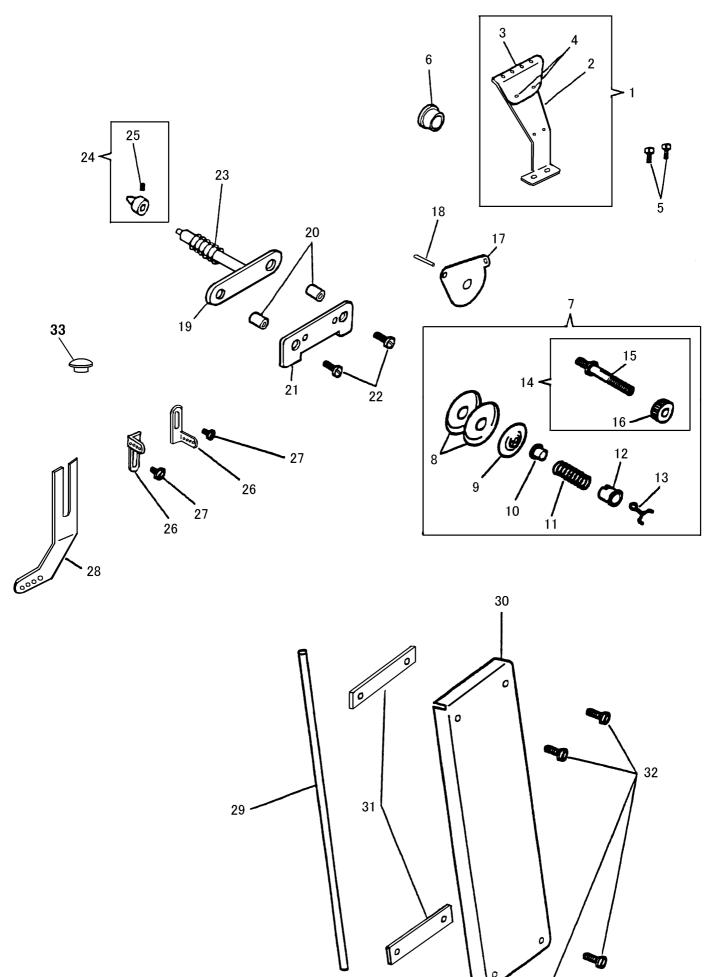


NO.	PART NO.	DESCRIPTION
1	K268506	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET K268111 WITH K268505 AND TWO K50169
2	K268111	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET
3	K268505	LOOPER THREAD GUIDE (TOP OF ARM)
4	K50169	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET SCREW (2)
5	K414537	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET SCREW (2)
6	K544875	
7	K267971	NEEDLE THREAD TENSION COMPLETE, NOS. K32572, K59538, K59539, K131741, K143657, K143658 AND TWO K2102
8 9	K2102 K32572	NEEDLE THREAD TENSION DISC (2) NEEDLE THREAD TENSION RELEASING DISC
9 10	K59538	NEEDLE THREAD TENSION RELEASING DISC NEEDLE THREAD TENSION SPRING BUSHING (BACK)
10	K131741	NEEDLE THREAD TENSION SPRING BUSHING (BACK)
12	K143657	NEEDLE THREAD TENSION SERING BUSHING (FRONT)
13	K143658	NEEDLE THREAD TENSION THUMB NUT LOCKING SPRING
14	K59539	NEEDLE THREAD TENSION STUD K50326 WITH K51570
15	K50326	NEEDLE THREAD TENSION STUD
16	K51570	NEEDLE THREAD TENSION THUMB NUT
17	K54279	NEEDLE THREAD TENSION THREAD GUIDE (DOUBLE)
18	K226206	NEEDLE THREAD TENSION RELEASING PIN
19	K415357	NEEDLE THREAD TENSION RELEASER
20	K543853 -003	NEEDLE THREAD TENSION BRACKET SPACING COLLAR (2)
21	K268167	NEEDLE THREAD TENSION BRACKET
22	K544336	NEEDLE THREAD TENSION BRACKET SCREW (2)
23	K204365	NEEDLE THREAD TENSION RELEASER SPRING
24 25	K415252	NEEDLE THREAD TENSION RELEASER CAP WITH K504048 NEEDLE THREAD TENSION RELEASER CAP SET SCREW
25 26	K504048 K268513	NEEDLE THREAD TENSION RELEASER CAP SET SCREW NEEDLE THREAD GUIDE (ON SIDE OF ARM) (2)
20 27	K414514	NEEDLE THREAD GUIDE (ON SIDE OF ARM) (2) NEEDLE THREAD GUIDE SCREW (2)
28	K268312	NEEDLE THREAD GUIDE (ON ARM HEAD)
20 29	K268123	LOOPER THREAD TUBE
30	K415342 -451	LOOPER THREAD TUBE COVER
31	K268500	LOOPER THREAD TUBE COVER CUSHION (2)
32	K414639	LOOPER THREAD TUBE COVER SCREW (4)
33	K502986	ARM PLUG (3)

## EXTERNAL PARTS SEWING ARM

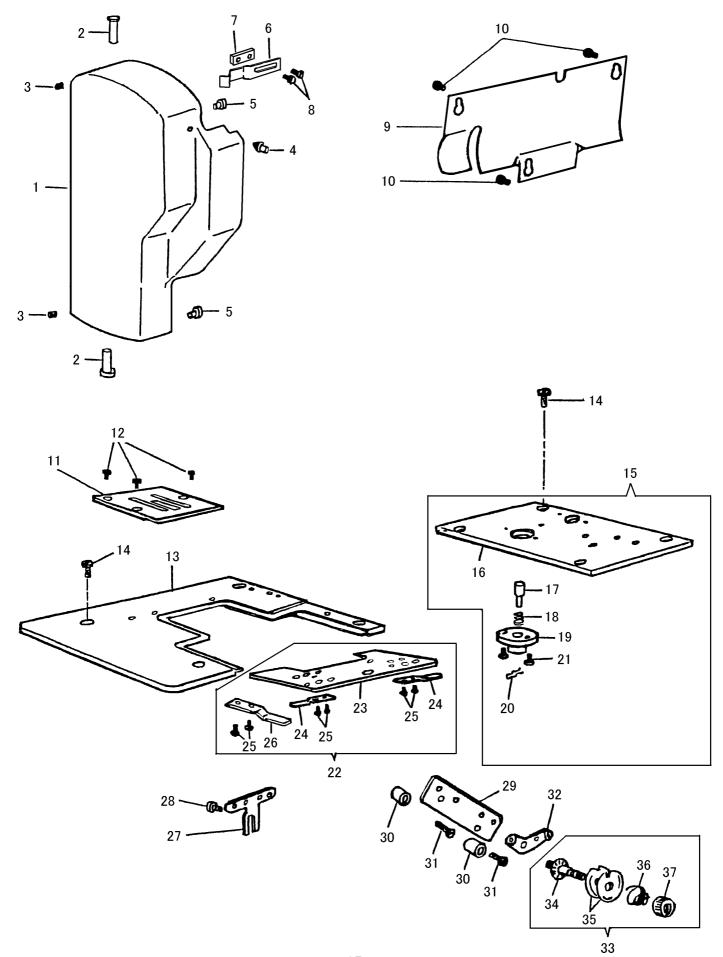

NO.	PART NO.	DESCRIPTION
1	K415012 -451	FACE PLATE WITH K268033 AND TWO EACH K228661 AND K545174-452
2	K268330	FACE PLATE HINGE STUD (2)
3	K545174 -452	FACE PLATE HINGE STUD SET SCREW (2)
4	K268033	FACE PLATE LOCK STUD
5	K228661	FACE PLATE CUSHION (NEOPRENE) (2)
6	K268032	FACE PLATE LOCK SPRING
7	K415016	FACE PLATE LOCK SPRING PLATE
8 9	K414534 K268010 -451	FACE PLATE LOCK SPRING SCREW (2) ARM SIDE COVER
9 10		ARM SIDE COVER ARM SIDE COVER SCREW (3)
11	K268614	THROAT PLATE
12	K414518	THROAT PLATE SCREW (3)
13	K415022 -451	BED PLATE (LEFT)
14	K414508	BED PLATE SCREW (8)
15	K415034 -451	BED PLATE (RIGHT) COMPLETE
16	K415035 -451	BED PLATE (RIGHT)
17	K268081	FEED REGULATING STUD
18	K270026	FEED REGULATING STUD SPRING
19 20	K268082 K240245	FEED REGULATING STUD SOCKET FEED REGULATING STUD RETAINING SPRING
20	K545249 -452	FEED REGULATING STUD RETAINING SPRING
21	K415020	BED PLATE SLIDE COMPLETE, NOS. K415021, K267970 WITH TWO K268022 AND SIX K545086
23	K415020	BED PLATE SLIDE
24	K268022	BED PLATE SLIDE SPRING (2)
25	K545086	BED PLATE SLIDE SPRING SCREW (6)
26	K267970	BED PLATE SLIDE SPRING (LEFT UPPER)
27	K268373	LOOPER THREAD GUIDE (ON BED AT LOOPER)
28	K414556	LOOPER THREAD GUIDE (ON BED AT LOOPER) SCREW
29	K415255	LOOPER THREAD TENSION BRACKET
30	K543853 -003	LOOPER THREAD TENSION BRACKET SPACING COLLAR (2)
31 32	K414532 K268333	LOOPER THREAD TENSION BRACKET SCREW (2) LOOPER THREAD TENSION THREAD GUIDE
33	K415294	LOOPER THREAD TENSION COMPLETE, NOS. K10148, K415291,K541452 AND TWO K412203
34	K415291	LOOPER THREAD TENSION STUD
35	K412203	LOOPER THREAD TENSION DISC (2)
36	K10148	LOOPER THREAD TENSION SPRING
37	K541452	LOOPER THREAD TENSION THUMB NUT
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		
1		

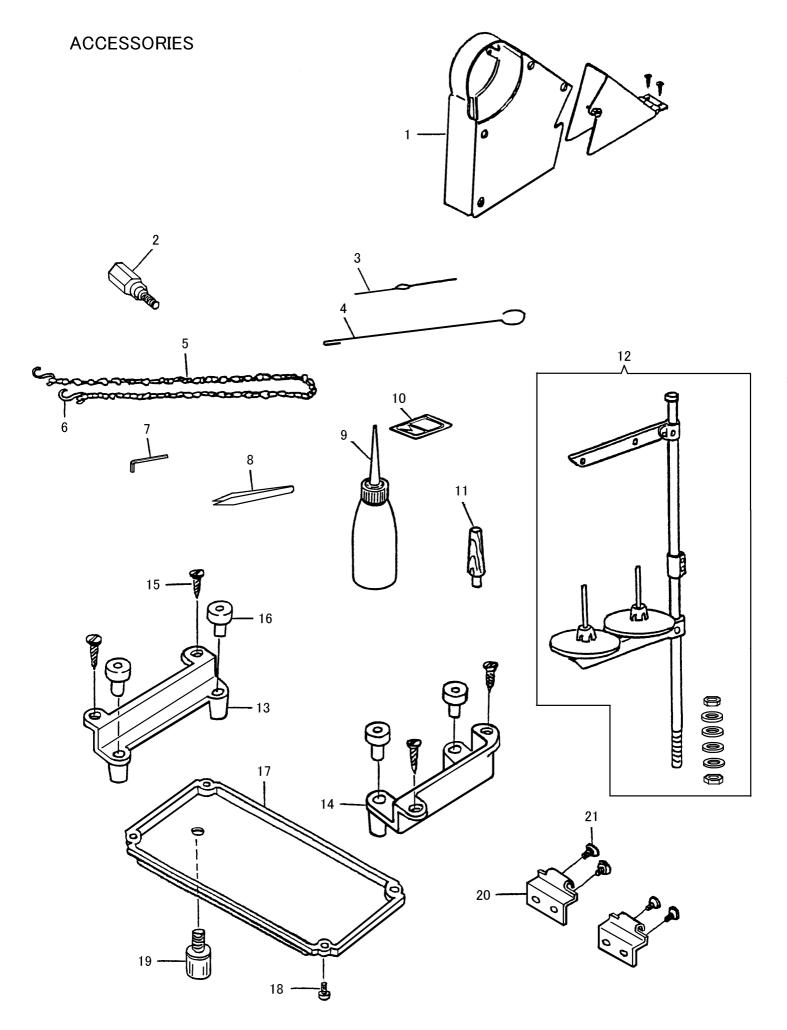

NO.	PART NO.	DESCRIPTION
1	K415433 -452	BELT GUARD COMPLETE
2	K415458	LIGHT FIXTURE STUD
3	K268340	LOOPER THREADING WIRE
4	K415377	THREAD WIRE
5	K232365	FOOT LIFTER TREADLE CHAIN (41-1/2 INCHES LONG)
6	K202784	FOOT LIFTER TREADLE CHAIN HOOK (2)
7	K21887	WRENCH
8	K543162	TWEEZERS
9	K546906	OILER
10	KN3260-01 -22	NEEDLE (62X57) SIZE 22 (5)
11	K410186	MACHINE REST PIN
12	K376392 -453	
13 14	K228733 -451 K228734 -451	MACHINE REST (LEFT) MACHINE REST (RIGHT)
14	K414583	WOOD SCREW (FOR MACHINE REST) (4)
16	K228444	MACHINE CUSHION (NEOPRENE) (4)
17	K228731 -451	DRIP PAN
18	K545302	DRIP PAN SCREW (4)
19	K167448	OIL DRAIN JAR
20	K265307	BED HINGE CONNECTION (2)
21	K544381	BED HINGE CONNECTION SCREW (4)
1		
1		
1		
1		
1		
1		
1		
1		

PART NO.	DESCRIPTION	PAGE	NO.
K229	LOOP DEFLECTOR SCREW (2)	10	3
K2102	NEEDLE THREAD TENSION DISC (2)	14	8
K10148	LOOPER THREAD TENSION SPRING	16	36
K21887	WRENCH	18	7
K32572	NEEDLE THREAD TENSION RELEASING DISC	14	9
K32825	SPREADER DRIVING ROCK SHAFT SCREW STUD OIL PACKING (WICK)	12	16
K32848	ARM SHAFT BALL BEARING (FRONT)	2	2
K50169	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET SCREW (2)	14	4
K50326	NEEDLE THREAD TENSION STUD	14	15
K51570	NEEDLE THREAD TENSION STOD	14	
K54279	NEEDLE THREAD TENSION THOMB NOT	14	16 17
K59538	NEEDLE THREAD TENSION THREAD GOIDE (DOOBLE)	14	10
K59539	NEEDLE THREAD TENSION SERVING BOSINING (BACK) NEEDLE THREAD TENSION STUD K50326 WITH K51570	14	14
K131741	NEEDLE THREAD TENSION STOD R50520 WITH R51570	14	14
		14	
K141478	NEEDLE GUARD SET SCREW (FRONT)	-	37
K141494	NEEDLE GUARD SET SCREW (BACK) NEEDLE THREAD TENSION SPRING BUSHING (FRONT)	10	36
K143657		14	12
K143658	NEEDLE THREAD TENSION THUMB NUT LOCKING SPRING	14	13
K167448	OIL DRAIN JAR	18	19
K201363	FOOT LIFTER LEVER HINGE SCREW	6	9
K201477	LOOPER THROW-OUT GEAR LOCKING PLUNGER SCREW BUSHING	10	65
K202253	ARM SHAFT CONNECTION BELT PULLEY SPRING FLANGE (2)	2	38
K202330	NEEDLE BAR CONNECTING STUD OIL PACKING (WICK)	4	9
K202784	FOOT LIFTER TREADLE CHAIN HOOK (2)	18	6
K204348	FOOT LIFTER LEVER SPRING	6	1
K204365	NEEDLE THREAD TENSION RELEASER SPRING	14	23
K204925	LOOPER DRIVING CRANK OIL HOLE COVER SCREW WASHER	8	6
K214529	NEEDLE BAR ROCK FRAME REGULATING STUD SPRING	4	30
K226206	NEEDLE THREAD TENSION RELEASING PIN	14	18
K228444	MACHINE CUSHION (NEOPRENE) (4)	18	16
K228661	FACE PLATE CUSHION (NEOPRENE) (2)	16	5
K228731 -451		18	17
K228733 -451		18	13
K228734 -451		18	14
K232365	FOOT LIFTER TREADLE CHAIN (41-1/2 INCHES LONG)	18	5
K240245	FEED REGULATING STUD RETAINING SPRING	16	20
K241763	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW PACKING (BACK) (2)	2	20
K241763	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW PACKING (BACK) (2)	8	41
K248423	FOOT LIFTER LEVER ROD COTTER PIN (2)	6	11
K250265	LOOPER THROW-OUT GEAR LOCKING PLUNGER SPRING	10	62
K265307	BED HINGE CONNECTION (2)		
		18	20
K267608	NEEDLE BAR ROCK FRAME DRIVING CONNECTION	2	18
K267608	FEED DRIVING CONNECTION	8	27
K267609	NEEDLE BAR ROCK FRAME DRIVING CONNECTION K267608 WITH K271055	2	20
K267609	FEED DRIVING CONNECTION K267608 WITH K271055	8	29
K267623	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE	2	25
K267623	FEED DRIVING ECCENTRIC FRICTION PLATE	8	42
K267707	NEEDLE THREAD TENSION RELEASING PLATE	6	5
K267933		10	30
K267970	BED PLATE SLIDE SPRING (LEFT UPPER)	16	26
K267971	NEEDLE THREAD TENSION COMPLETE, NOS. K32572, K59538, K59539, K131741, K143657, K143658 AND TWO	14	7
	K2102	1	
K268004 -451	ARM SHAFT BALL BEARING (BACK) HOUSING	2	40
K268009	ARM SHAFT OIL STOP BALL SPRING (FRONT)	2	12
K268010 -451	ARM SIDE COVER	16	9
K268022	BED PLATE SLIDE SPRING (2)	16	24
K268029	NEEDLE BAR ROCK FRAME NEEDLE BEARING (2)	4	14
K268032	FACE PLATE LOCK SPRING	16	6
K268033	FACE PLATE LOCK STUD	16	4
K268035	FEED BAR HINGE PIN	10	21
K268044	ARM SHAFT OIL STOP BALL SPRING (REAR)	2	15
K268044	BED SHAFT OIL STOP BALL SPRING	8	23
K268051	LOOPER THREAD GUIDE (ON FRONT)	12	22
K268052	LOOPER THREAD TAKE-UP ROD	12	20
K268056	NEEDLE BAR CONNECTING LINK WITH TWO K270266	4	1
K268065	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC	2	29
K268065	FEED DRIVING ECCENTRIC ADJUSTING DISC	8	29 45
K268065	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING	2	45 30
K268066	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING	8	46
K268070	FEED DRIVING ROCK SHAFT	10	17
K268074		8	12
K268077	FEED LIFTING ECCENTRIC LUBRICATING PAD (WOOD)	8	10
K268078	FEED LIFTING LINK FEED LIFTING LINK HINGE PIN WITH K268258 (2)	10	24
K268079		10	25

PART NO.	DESCRIPTION	PAGE	NO.
K268081	FEED REGULATING STUD	16	17
K268082	FEED REGULATING STUD SOCKET	16	19
K268086	FOOT LIFTER LEVER ROD	6	10
K268093	LOOPER CARRIER SHAFT	10	46
K268096	LOOPER CARRIER SHAFT BUSHING (LEFT) POSITION PLATE	10	73
K268102	LOOPER DRIVING CRANK OIL HOLE COVER	8	4
K268111	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET	14	2
K268123	LOOPER THREAD TUBE	14	29
K268131	LOOPER THROW-OUT SAFETY LATCH	10	31
K268132	LOOPER THROW-OUT SAFETY LATCH SPRING	10	58
K268133	LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET	10	59
K268139	NEEDLE BAR CONNECTING LINK CAP WASHER	4	4
K268144	NEEDLE BAR OILING FELT (2)	4	15
K268148	NEEDLE BAR ROCK FRAME REGULATING STUD	4	31
K268149	NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE	4	29
K268162	SPREADER POINT	12	2
K268167	NEEDLE THREAD TENSION BRACKET	14	21
K268172	PRESSER BAR	6	21
K268173	PRESSER BAR BUSHING	6	22
K268176	PRESSER BAR SPRING	6	24
K268184	SPREADER BAR BRACKET	12	7
K268190	SPREADER DRIVING PIN	12	10
K268208	LOOPER CARRIER CRANK HINGE PIN WITH K268258	10	40
K268214	ARM SHAFT OIL STOP BALL 5/32 IN. DIA. (2)	2	13
K268214	BED SHAFT OIL STOP BALL 5/32 IN. DIA.	8	24
K268219	NEEDLE BAR ROCK FRAME THREAD GUIDE	4	18
K268220	SPREADER DRIVING ECCENTRIC THRUST WASHER (2) NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD OIL PACKING (WICK)	8	52
K268258	FEED LIFTING CONNECTION HINGE STUD OIL PACKING (WICK)	4	25
K268258 K268258	FEED LIFTING CONNECTION HINGE STUD OIL PACKING (WICK) FEED DRIVING CONNECTION HINGE STUD OIL PACKING (WICK)	8 8	17 33
	FEED DRIVING CONNECTION HINGE STOD OIL PACKING (WICK)	10	
K268258 K268258	LOOPER CARRIER CRANK HINGE PIN OIL PACKING (WICK) (2)	10	26 41
K268264	ARM SHAFT OIL CONTROL ROD (WOOD)	2	11
K268265	BED SHAFT OIL CONTROL ROD (WOOD)	8	22
K268270	ARM SHAFT CONNECTION BELT (REINFORCED NEOPRENE)	2	36
K268278	NEEDLE BAR OILING FELT HOLDER (2)	4	16
K268312	NEEDLE THREAD GUIDE (ON ARM HEAD)	14	28
K268313	LOOPER THROW-OUT GEAR LOCKING PLUNGER HANDLE	10	66
K268318	LOOP DEFLECTOR	10	2
K268330	FACE PLATE HINGE STUD (2)	16	2
K268333	LOOPER THREAD TENSION THREAD GUIDE	16	32
K268340		18	3
K268373	LOOPER THREAD GUIDE (ON BED AT LOOPER)	16	27
K268380	LOOPER WITH K141478 AND K141494	10	34
K268499	SPREADER BAR	12	9
K268500	LOOPER THREAD TUBE COVER CUSHION (2)	14	31
K268505	LOOPER THREAD GUIDE (TOP OF ARM)	14	3
K268506	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET K268111 WITH K268505 AND TWO K50169	14	1
K268512	NEEDLE THREAD GUIDE (ON NEEDLE BAR CONNECTING STUD)	4	5
K268513	NEEDLE THREAD GUIDE (ON SIDE OF ARM) (2)	14	26
K268613	PRESSER FOOT COMPLETE	6	23
K268614	THROAT PLATE	16	11
K268618	FEED DOG WITH K268318 AND TWO K229	10	1
K268638	SPREADER WITH K268162	12	1
K269616	FOOT LIFTER LIFTING LINK	6	14
K270026	FEED REGULATING STUD SPRING	16	18
K270266	NEEDLE BAR CONNECTING LINK NEEDLE BEARING (2)	4	2
K271055	NEEDLE BAR ROCK FRAME DRIVING CONNECTION NEEDLE BEARING	2	19
K271055	FEED DRIVING CONNECTION NEEDLE BEARING	8	28
K272142	ARM SHAFT BALL BEARING (BACK)	2	47
K272142	BED SHAFT THRUST COLLAR BEARING	8	63
K281206	NEEDLE BAR CRANK COVER	2	7
K281207	NEEDLE GUARD	10	35
K281208	LOOPER AND NEEDLE GUARD COMPLETE, NOS. K281207 AND K268380	10	33
K281209	NEEDLE BAR CRANK COMPLETE, NOS. K415133 AND K32848	2	3
K281212	BED SHAFT WITH K268044, K268214, K268265 AND K414578	8	21
K281216	BED SHAFT BALL BEARING	8	19
K281223	LOOPER DRIVING CONNECTION WITH K415500	10	38
K281224	BED SHAFT BALL BEARING	8	20
K281246	SPREADER DRIVING CONNECTION WITH K415368, K281248 AND K544201-001	8	53
K281248	SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER	8	55
K281250	SPREADER DRIVING ROCK SHAFT SCREW STUD	12	15
K281256	COUNTERBALANCE WITH TWO K544208-005	2	34
K281258	NEEDLE BAR CRANK OIL PACKING (WICK)	2	9
K281265	LOOPER CARRIER WITH TWO K415500	10	44
K281274	LOOPER HOLDER WITH TWO K414558	10	42

PART NO.	DESCRIPTION	PAGE	NO.
K281290	ARM SHAFT CONNECTION BELT PULLEY WITH TWO EACH K414546 AND K202253	2	37
K281292	BED SHAFT CONNECTION BELT PULLEY WITH TWO 414546	8	58
K281294	ARM SHAFT THRUST COLLAR WITH K272142, K281295-001 AND TWO K544209-005	2	46
K281294	BED SHAFT THRUST COLLAR WITH K281295-001, K272142 AND TWO K544209-005	8	60
K281295 -001		2	48
K281295 -001		8	61
K281296 -467		2	42
K281297 -467		2	43
K281297 -407 K281912		2 4	-
	NEEDLE BAR	4	10
K374098	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW (2)	<u>_</u>	26
K374098	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW (2)	8	43
K374099	LOOPER DRIVING CRANK POSITION SCREW (2)	8	2
K376392 -453		18	12
K410186	MACHINE REST PIN	18	11
K412011	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR WITH TWO K544325	2	31
K412011	FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR WITH TWO K544325	8	47
K412203	LOOPER THREAD TENSION DISC (2)	16	35
K414501	FEED LIFTING CRANK PINCH SCREW	10	28
K414508	BED PLATE SCREW (8)	16	14
K414509	NEEDLE BAR ROCK FRAME DRIVING ARM PINCH SCREW (2)	4	21
K414510	LOOPER THREAD GUIDE SCREW	12	23
K414511	NEEDLE BAR CONNECTING STUD PINCH SCREW (2)	4	7
K414511	FEED LIFTING ROCK SHAFT CRANK PINCH SCREW (2)	8	14
K414511	FEED DRIVING ROCK SHAFT CRANK PINCH SCREW (2)	8	31
K414513	PRESSER BAR GUIDE BRACKET PINCH SCREW	6	18
	NEEDLE THREAD GUIDE SCREW (2)	14	-
K414514 K414515	LOOPER CARRIER SHAFT BUSHING (LEFT) POSITION PLATE SCREW (2)	14	27 74
	LOOPER CARRIER SHAFT BUSHING (LEFT) POSITION PLATE SCREW (2)	-	
K414516		10	52
K414517	NEEDLE BAR CONNECTING LINK CAP WASHER SCREW	4	3
K414518	FEED DOG SCREW (2)	10	4
K414518	THROAT PLATE SCREW (3)	16	12
K414519	NEEDLE SET SCREW	4	11
K414520	FEED DOG SHANK SCREW	10	8
K414522	NEEDLE BAR OILING FELT HOLDER SCREW (2)	4	17
K414524	SPREADER BAR BRACKET SCREW (2)	12	8
K414525	MACHINE PULLEY SET SCREW	2	44
K414526	MACHINE PULLEY POSITION SCREW	2	45
K414527	NEEDLE BAR ROCK FRAME REGULATING STUD SLEEVE SET SCREW	4	32
K414528	NEEDLE BAR ROCK FRAME REGULATING STUD CAP SET SCREW	4	28
K414528	SPREADER DRIVING ECCENTRIC SET SCREW (2)	8	51
K414528	SPREADER DRIVING ECCENTRIC COUNTERBALANCE SET SCREW (2)	8	51
K414528	LOOPER THROW-OUT GEAR LOCKING PLUNGER STOP SCREW SET SCREW	10	64
K414529	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC SPACING COLLAR SET SCREW (2)	2	17
K414529	PRESSER BAR STOP COLLAR SET SCREW	6	20
K414529	FEED BAR HINGE PIN COLLAR SET SCREW	10	23
K414529	SPREADER HOLDER SET SCREW (2)	10	
K414529 K414531	NEEDLE THREAD TENSION RELEASING PLATE SCREW	6	6 6
		-	
K414532	LOOPER THREAD TENSION BRACKET SCREW (2)	16	31
K414534	FACE PLATE LOCK SPRING SCREW (2)	16	8
K414535	PRESSER BAR GUIDE BRACKET ADJUSTING SCREW	6	17
K414537	LOOPER THREAD GUIDE (TOP OF ARM) BRACKET SCREW (2)	14	5
K414539	NEEDLE BAR ROCK FRAME THREAD GUIDE SCREW (2)	4	19
K414545	NEEDLE THREAD GUIDE (ON NEEDLE BAR CONNECTING STUD) SET SCREW	4	8
K414546	ARM SHAFT CONNECTION BELT PULLEY SET SCREW (2)	2	39
K414546	BED SHAFT CONNECTION BELT PULLEY SET SCREW (2)	8	59
K414549	FEED LIFTING ROCK SHAFT CRANK POSITION SCREW	8	15
K414552	SPREADER SCREW	12	3
K414555	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE SET SCREW (2)	2	24
K414555	FOOT LIFTER LEVER SPRING SCREW	6	2
K414555	FEED DRIVING ECCENTRIC FLANGE SET SCREW (2)	8	39
K414556	LOOPER THREAD GUIDE (ON BED AT LOOPER) SCREW	16	28
K414557	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2)	2	27
K414557	FEED DRIVING ECCENTRIC FRICTION PLATE SCREW SET SCREW (2)	8	40
K414558	LOOPER SET SCREW (2)	10	43
K414559	FEED DOG SHANK ADJUSTING SCREW	10	6
K414562	PRESSER BAR SPRING SUPPORT SCREW	6	25
K414563	LOOPER DRIVING CRANK OIL HOLE COVER SCREW	8	25 5
	LOOPER DRIVING CRAIN OIL HOLE COVER SCREW	8 10	
K414564		-	63
K414568		6	15
K414570	FOOT LIFTER LEVER SPRING SCREW EYE	6	3
K414572	FOOT LIFTER LEVER BELL CRANK HINGE SCREW	6	13
14444574	PRESSER BAR SPRING ADJUSTING SCREW	6	26
K414574	ARM SHAFT OIL STOP BALL SCREW (2)	2	14
K414574 K414578	ARM SHAFT OLE STOF BALL SCREW (2)		
-	BED SHAFT OIL STOP BALL SCREW (2)	8	25
K414578			25 15

PART NO.	DESCRIPTION	PAGE	NO.
		10	56
		16	1
K415016	FACE PLATE LOCK SPRING PLATE	16	7
K415020	BED PLATE SLIDE COMPLETE, NOS. K415021, K267970 WITH TWO K268022 AND SIX K545086	16	22
K415021	BED PLATE SLIDE	16	23
	BED PLATE (LEFT)	16	13
		16	15
K415035 -451		16	16
K415038	NEEDLE BAR ROCK FRAME	4	13
K415053	NEEDLE BAR CONNECTING STUD WITH K202330, K414545 AND TWO K414511	4	6
K415055	PRESSER BAR STOP COLLAR WITH K414529	6	19
K415057	PRESSER BAR GUIDE BRACKET WITH K414513 AND K414535	6	16
K415065	FEED DRIVING ROCK SHAFT COLLAR WITH TWO K504020 (2)	10	15
K415065	FEED LIFTING ROCK SHAFT COLLAR WITH TWO K504020 (2)	10	15
K415065	SPREADER DRIVING ROCK SHAFT COLLAR WITH TWO K504020 (2)	12	18
K415073	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE K415074 WITH K267623 AND TWO EACH K241763,	2	22
1/11/070	K414555, K414557 AND K374098		07
K415073	FEED DRIVING ECCENTRIC FLANGE K415074 WITH K267623 AND TWO EACH K241763, K414555, K414557 AND K374098	8	37
K445074		0	
K415074	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC FLANGE	2	23
K415074	FEED DRIVING ECCENTRIC FLANGE	8	38
	NEEDLE BAR ROCK FRAME DRIVING ARM WITH TWO K414509	4	20
K415092	NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD WITH K268258	4	22
K415092	FEED LIFTING CONNECTION HINGE STUD	8	16
K415092	FEED DRIVING CONNECTION HINGE STUD	8	32
K415098	NEEDLE BAR ROCK FRAME REGULATING STUD COMPLETE, NOS. K214529, K415099, K268148 AND K268149	4 4	26
K415099	NEEDLE BAR ROCK FRAME REGULATING STUD CAP WITH K414528	-	27
K415102 -451	FOOT LIFTER LEVER BELL CRANK	6	12
	FOOT LIFTER LEVER WITH K543850-001	6	4
K415128	ARM SHAFT WITH K268009, K268044, K268264, TWO EACH K268214 AND K414578 NEEDLE BAR CRANK WITH K500272-833, K544358 AND K549024	2	10
K415133		2	1
K415168	LOOPER CARRIER SHAFT BUSHING (LEFT) WITH K500264-833 AND K549024 LOOPER CARRIER SHAFT BUSHING (RIGHT) WITH K500264-833 AND K549024	10 10	47
K415170	LOOPER CARRIER SHAFT BUSHING (RIGHT) WITH R500204-033 AND R549024	-	48
K415174 K415176	LOOPER CARRIER CRANK WITH K414516 LOOPER DRIVING CRANK WITH K500264-833 AND TWO K374099	10 8	51 1
K415178		-	
K415178 K415179	LOOPER THROW-OUT RACK ROD K415179 WITH K541451 LOOPER THROW-OUT RACK ROD	10 10	68 60
	LOOPER THROW-OUT GEAR WITH TWO K500264-833		69 71
K415180 K415182	LOOPER THROW-OUT GEAR WITH TWO K500264-833	10 10	71
	SPREADER DRIVING ECCENTRIC WITH K543808-002 AND TWO K414528	8	61
K415187 K415190	SPREADER DRIVING ECCENTRIC WITH K943806-002 AND TWO K414526	8	49 57
K415190 K415194	SPREADER DRIVING ECCENTRIC COUNTERBALANCE WITH TWO R414926 SPREADER DRIVING CRANK WITH TWO K544204-001	8 12	57 13
K415194 K415196	SPREADER DRIVING CRAIK WITH TWO K944204-001 SPREADER HOLDER WITH TWO K414529	12	5
K415196 K415198	FEED BAR WITH K545213 AND TWO K544204-001	12	18
K415198 K415200	FEED DRIVING ROCK FRAME WITH K500264-833 AND K549024	10	10
K415200 K415202	FEED BAR HINGE PIN COLLAR WITH K414529	10	22
K415202 K415204	FEED LIFTING CRANK WITH K414501 AND K545213	10	22
K415206	FEED LIFTING CKANK WITT K41450T AND K5452TS	8	13
K415208	FEED DOG SHANK WITH K414559 AND K541200	0 10	5
K415208 K415210		8	9
K415210 K415213	FEED LIFTING ECCENTRIC WITH K268077 AND TWO K544208-005 FEED DRIVING ROCK SHAFT CRANK WITH TWO K414511	8	9 30
K415215 K415215	FEED DRIVING ROCK SHAFT CRANK WITH TWO R414511 FEED DRIVING ROCK SHAFT CRANK K415213 WITH K267609, K415091, K541197 AND K545297	о 8	30 26
K415215 K415252	NEEDLE THREAD TENSION RELEASER CAP WITH K504048	о 14	20
K415252 K415255	LOOPER THREAD TENSION BRACKET	14	24 29
K415291	LOOPER THREAD TENSION STUD	16	34
K415292	LOOPER CARRIER CRANK CLAMPING STUD	10	53
K415294	LOOPER THREAD TENSION COMPLETE, NOS. K10148, K415291,K541452 AND TWO K412203	16	33
K415297	FEED DRIVING ROCK SHAFT BUSHING (2)	10	14
K415297	FEED LIFTING ROCK SHAFT BUSHING (2)	10	14
K415297	SPREADER DRIVING ROCK SHAFT BUSHING (2)	12	14
	LIFTING ECCENTRIC SPACING COLLAR WITH TWO K414529	2	16
	LOOPER THREAD TUBE COVER	14	30
K415357	NEEDLE THREAD TENSION RELEASER	14	19
K415360	FOOT LIFTER LIFTING LINK STOP PIN	6	27
K415368	SPREADER DRIVING CONNECTION NEEDLE BEARING	8	54
K415377	THREAD WIRE	18	4
K415389	SPREADER DRIVING ROCK SHAFT WITH K504019	12	12
K415433 -452	BELT GUARD COMPLETE	12	1
K415458	LIGHT FIXTURE STUD	18	2
K415500	LOOPER DRIVING CONNECTION BUSHING	10	2 39
K415500	LOOPER CARRIER BUSHING (2)	10	45
K415500 K418465	LOOPER CARRIER BUSHING (2) LOOPER DRIVING CONNECTION WASHER	8	45 7
		8	3
		-	
	EEED DRIVING ROCK ERAME SET SCREW		
K500264 -833	FEED DRIVING ROCK FRAME SET SCREW LOOPER CARRIER SHAFT BUSHING SET SCREW (2)	10 10	13 50

K602096     ARM FLUG (3)     14     22       K564019     LOOPER THREAD TAKE-UP ROD SET SCREW (4)     10     16       K564020     FEED DRIVING ROCK SHAFT COLLAR SET SCREW (4)     10     16       K564020     FEED DRIVING ROCK SHAFT COLLAR SET SCREW (4)     12     12       K564020     SPREADER DRIVING ROCK SHAFT COLLAR SET SCREW (4)     12     14     22       K5641197     MEEDLE THREAD TENSION RELEARS CAP SET SCREW (4)     4     22     14     23       K5641197     MEEDLE THREAD CONFERION HING CONNECTION HINGE STUD NUT     4     23     33       K5641197     MEEDLO PER SCREW COCK NUT     10     7     16     16     33     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34     34	PART NO.	DESCRIPTION	PAGE	NO.
KS04019     LOOPER THREAD TAKE-UP ROD SET SCREW (4)     10     10       KS04020     FEED DRIVING ROCK SHAFT COLLAR SET SCREW (4)     10     16       KS04020     FEED DRIVING ROCK SHAFT COLLAR SET SCREW (4)     10     16       KS04020     SPREADER DRIVING ROCK SHAFT COLLAR SET SCREW (4)     12     14       KS04020     SPREADER DRIVING ROCK SHAFT COLLAR SET SCREW (4)     42     25       KS11137     NEEDLE EAR ROCK FRAME DRIVING CONNECTION HINGE STUD NUT     8     36       KS11137     FEED DRIVING CONNECTION HINGE STUD NUT     8     36       KS11137     FEED DRIVING CONNECTION HINGE STUD NUT     8     36       KS11137     FEED DRIVING CONNECTION HINGE STUD NUT     10     77       KS11130     LOOPER THREAD TENSION THUMB NUT     10     77       KS11132     LOOPER THREAD TENSION RELEASING PLATE SCREW WASHER     10     9       KS43801 -001     LOOPER THREAD TENSION RELEASING PLATE SCREW WASHER     10     9       KS44804     NEEDLE THREAD TENSION RELEASING PLATE SCREW WASHER     10     9       KS44804     NEEDLE THREAD TENSION RELEASING PLATE PIN     5     5  <	K500272 -833	NEEDLE BAR CRANK SET SCREW	2	6
KS04020     FEED DRIVING ROCK SHAFT COLLAR SET SCREW (4)     10     10       KS04020     SPREADER DRIVING ROCK SHAFT COLLAR SET SCREW (4)     12     15       KS04030     SPREADER DRIVING ROCK SHAFT COLLAR SET SCREW (4)     14     22       KS41197     NEEDLE THRAD TENSION RELASER CAP SET SCREW (4)     4     22       KS41197     NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD NUT     4     2       KS41197     FEED LITING CONNECTION HINGE STUD NUT     8     6       KS41197     FEED LITING CONNECTION HINGE STUD NUT     10     5       KS41183     LOOPER CHARD TERSION THUMB NUT     10     7       KS41183     LOOPER THROW -OUT GEAR LOOKING PLUNGER THUMB NUT     10     3       KS43041 -002     LOOPER THROW -OUT GEAR LOOKING PLUNGER THUMB NUT     10     3       KS43045 -001     LOOPER THROW -OUT SAFETY LATCH RETAINING RING     10     3       KS43084 -000     FEED DOG SHAMK SCREW WASHER     10     5       KS43085 -002     SPREADER DRIVING ECONNECHARCH SPACING COLLAR (2)     14     2       KS43085 -002     SPREADER DRIVING SCRAW, SAFER     10     5     5 <	K502986		14	33
K604020     FEED LITTING ROCK SHAFT COLLAR SET SCREW (4)     10     11       K504020     SPREADER DWINNG ROCK SHAFT COLLAR SET SCREW (4)     12     14       K541197     FEED LITTING CONFECTION HINGE STUD NUT     4     22       K541197     FEED DENIKOS CONFECTION HINGE STUD NUT     8     34       K541197     FEED DENIKOS CONFECTION HINGE STUD NUT     8     34       K541197     FEED DENIKO CONFECTION HINGE STUD NUT     8     34       K541197     FEED DENIKO CONFECTION HINGE STUD NUT     10     77       K541430     LOOPER THRAD TENSON THACK AND THUMB NUT     10     77       K541431     LOOPER THRAD TENSON PLATE SCREW WASHER     10     57       K543804     OH TEAD DES NICON PELASING PLATE SCREW WASHER     10     57       K543804     OH TEAD DES NICON RELEASING PLATE SCREW WASHER     10     57       K543804     OH TEAD DES NICON RELEASING PLATE SCREW WASHER     10     57       K543803     NEEDLE THREAD TENSION RELEASING PLATE SCREW WASHER     10     57       K543803     NEEDLE THREAD TENSION REACKET SPACING COLLAR (2)     56     56       K543803<	K504019	LOOPER THREAD TAKE-UP ROD SET SCREW	12	21
K600020     SPREADER DRIVING ROCK SHAFT COLLAR SET SCREW (4)     12     15       K500048     NEEDLE THRACT TENSION RELEASER CAP SET SCREW (4)     42     22       K541197     NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD NUT     8     7       K541197     FEED LITING CONNECTION HINGE STUD NUT     8     7       K541197     FEED LITING CONNECTION HINGE STUD NUT     8     7       K541182     LOOPER ATRIER CRANK CLOCK NUT     10     7       K541431     LOOPER THREAD TENSION THUMB NUT     16     63       K541432     LOOPER THREAD TENSION THUMB NUT     16     63       K541431     LOOPER THREAD TENSION THUMB NUT     16     63       K543801 -021     LOOPER THREAD TENSION RELEASING PLATE SCREW WASHER     10     9       K543801 -021     LOOPER THREAD TENSION RELEASING PLATE SCREW WASHER     16     7       K543801 -021     LOPER THREAD TENSION RELEASING PLATE SCREW WASHER     16     7       K544824     NEEDLE THREAD TENSION RELEASING PLATE PIN     6     6     6       K544825     NEEDLE THREAD TENSION REACKET SPACING COLLAR (2)     16     7     7	K504020	FEED DRIVING ROCK SHAFT COLLAR SET SCREW (4)	10	16
K604048     NEEDLE THREAD TENSION RELEASER CAP SET SCREW     14       K541197     FEED LIFTING CONFECTION HINGE STUD NUT     8       K541197     FEED DRIVING CONFECTION HINGE STUD NUT     8       K541197     FEED DRIVING CONFECTION HINGE STUD NUT     10       K541197     FEED DRIVING CONFECTION HINGE STUD NUT     10       K541198     LOOPER CARRIER CRANK CLAMPING STUD NUT     10       K541401     LOOPER THREAD TENSION TRACK ROD THUMB NUT     10       K541432     LOOPER THREAD TENSION TRACK ROD THUMB NUT     10       K541432     LOOPER THREAD TENSION TRACK ROD THUMB NUT     10       K54304     ON MEDIE THREAD TENSION RELEASING PLATE SCREW WASHER     10       K54304     MEEDE THREAD TENSION RELEASING PLATE SCREW WASHER     10       K543084     MEEDE THREAD TENSION RELEASING PLATE SCREW WASHER     10       K543084     MEEDE THREAD TENSION RELEASING PLATE SCREW WASHER     10       K543084     MEEDE THREAD TENSION RELEASING PLATE PIN     6       K543084     MEEDE THREAD TENSION REACKET SPACING COLLAR (2)     16       K543083     MEEDE THREAD TENSION REACKET SPACING COLLAR (2)     16       K543084     M	K504020		10	16
K541197     NEEDLE BAR ROCK FRAME DRIVING CONNECTION HINGE STUD NUT     4     4     2       K541197     FEED LETING CONNECTION HINGE STUD NUT     8     3       K541197     FEED DRIVING CONNECTION HINGE STUD NUT     10     7       K541198     LOOPER CARREN CRANK CRO THUMB NUT     10     7       K541481     LOOPER THREAD TENSION THUMB NUT     10     77       K541482     LOOPER THREAD TENSION THUMB NUT     10     77       K541481     LOOPER THREAD TENSION RULCK NUT     10     77       K541481     LOOPER THREAD TENSION RELEASING PLATE SCREW WASHER     10     93       K543801     04     HEED DOG SHANK SCREW WASHER     10     95       K543801     02     LOOPER THREAD TENSION RELEASING PLATE SCREW WASHER     10     95       K543803     NEEDLE THREAD TENSION RELEASING PLATE PIN     6     55     56       K543803     NOS LOPER MOLDER SCREW WASHER     10     95     56       K544204     NOS SPREW MASHER     10     95     56       K544203     NOS PEREMOLET HREAD TENSION BRACKET SPACING COLLAR (2)     16 <td< td=""><td>K504020</td><td></td><td></td><td>19</td></td<>	K504020			19
K541197     FEED DIFTING CONNECTION HINGE STUD NUT     8.     18.       K541197     FEED DRIVING CONNECTION HINGE STUD NUT     10.     56.       K541190     LOOPER CARRIER CRANK CLAMPING STUD NUT     10.     77.       K541420     FEED DOC SHANK CAJUSTING SCREW LOCK NUT     10.     77.       K541421     LOOPER THROW-OUT GAR LOCKING PLUNGER THUMB NUT     10.     76.       K541432     LOOPER THROW-OUT GAR LOCKING PLUNGER THUMB NUT     10.     76.       K543831     LOOPER THROW-OUT SAFETY LATCH RETAINING RING     10.     83.       K543831     MEEDLE THREAD TENSION RELEASING PLATE SCREW WASHER     10.     97.       K543804     MI EDDLE THREAD TENSION RELEASING PLATE PIN     6     8       K543803     MEEDLE THREAD TENSION REACKET SPACING COLLAR (2)     16.     30.       K544383     MEEDLE THREAD TENSION REACKET SPACING COLLAR (2)     16.     30.       K544203     MEEDLE THREAD TENSION REACKET SPACING COLLAR (2)     16.     30.       K544203     MEEDLE THREAD TENSION REACKET SPACING COLLAR (2)     16.     30.       K544203     MEEDLE THREAD TENSION REACKET SPACING COLLAR (2)     16.	K504048			25
K541197.     FEED DRIVING CONNECTION HINGE STUD NUT     10     54       K541198.     LOOPPER CARRE CRANK CRO THUMB NUT     10     77       K541481.     LOOPPER THREAD TENSION THUMB NUT     10     77       K541482.     LOOPPER THREAD TENSION THUMB NUT     10     77       K541451.     LOOPPER THREAD TENSION THUMB NUT     10     77       K541452.     LOOPPER THROW-OUT GAR LOCKING PLINGER THUMB NUT     10     77       K543081.     LOOPPER THROW-OUT GAR LOCKING PLINGER THUMB NUT     10     32       K543081.     LOOPPER THROW-OUT SAFETY LATCH RETAINING RING     10     32       K543081.     OLOPPER HOLDER SCREW WASHER     10     95       K543081.     GENTING ECORTRIC PIN     6     6       K543081.     OLDER NOLDER SCREW WASHER     10     52       K543083.     OSI NEDEL THREAD TENSION RELEASING PLATE PIN     6     6       K543083.     MEDLE THREAD TENSION RELEASING SCLLAR (2)     14     22       K544204.     MEDLE THREAD TENSION RACKET SPACING COLLAR (2)     14     24       K544204.     MEDLE THREAD TENSION RACKET SPACING COLLAR (2) <td></td> <td></td> <td></td> <td>23</td>				23
K54130     LOOPER CARRIER CRANK CLAMPING STUD NUT     10     57       K54120     FEED DOG SHANK ADJUSTING SCREW LOCK NUT     10     77       K541451     LOOPER THROW-OUT FACK ROD THUMB NUT     16     63       K541452     LOOPER THROW-OUT GEAR LOCKING PLUNGER THUMB NUT     16     63       K541453     LOOPER THROW-OUT SAFETY LATCH RETAINING RING     10     63       K543061     OLDER SCREW WASHER     6     7       K543081     OLDER SCREW WASHER     10     55       K543081     OLDER SCREW WASHER     16     33       K543081     OLDER SCREW WASHER     16     33       K544308     OLDER SCREW WASHER SCREW (2)     16     34       K544208     OS     NEEDLE THREAD TENSION BRACKET SPACING COLLAR (2)     16     34       K544208     OS     SPEDLET T	K541197		8	18
K541200     FEED DOG SHANK ADJUSTING SCREW LOCK NUT     10     77       K541451     LOOPER THREAD TENSION THUMB NUT     16     73       K541452     LOOPER THREAD TENSION THUMB NUT     16     73       K541453     LOOPER THREAD TENSION THUMB PLUT     16     73       K54301     TUEEZERS     18     86       K543301     OLOPER THRCW-OUT SAFETY LATCH RETAINING RING     10     75       K543304     OLOPER THRCW-OUT SAFETY LATCH RETAINING RING     6     76       K543304     OLOPER THRCW TUNIS CECENTRIC PIN     8     50       K543305     OLOPER THREAD TENSION RELEASING PLATE PIN     6     8       K543305     OLOPER THREAD TENSION BRACKET SPACING COLLAR (2)     16     76       K544204     OLO FEET DER DRIVING COLAR STAT SCREW STUD BALL ROLLER SET SCREW     8     56       K544204     SPEADER DRIVING CORANK SET SCREW (2)     10     15     12     14       K544204     SPEADER DRIVING CORANK SET SCREW (2)     2     4     44     22     14     14     14     14     14     14     14     14 <t< td=""><td></td><td></td><td></td><td>34</td></t<>				34
K541451     LOOPER THROW-OUT RÁCK ROD THUMB NUT     10     77       K541452     LOOPER THRCAD TENSION THUMB NUT     10     65       K541453     LOOPER THRCAD TENSION THUMB NUT     10     65       K543162     TWEEZERS     10     87       K543801     O12     LOOPER THRCM-OUT SAFETY LATCH RETAINING RING     10     10       K543801     O12     LOOPER THRCM TOLDERS SCERW WASHER     10     10     52       K543804     O4     FEED DG SHAKK SCREW WASHER     10     10     52       K543804     O4     FEED DG SHAKK SCREW WASHER     10     10     52       K543835     O30     NEEDLE THREAD TENSION BRACKET SPACING COLLAR (2)     14     22       K544204     O1     SPEADER DRIVING ROK SHAFT SOREW STUD BALL ROLLER SET SCREW     10     10       K544204     O1     SPEADER DRIVING CONARCEST SPACING COLLAR (2)     2     32       K544204     O1     SPEADER DRIVING CONARCEST SPACING COLLAR (2)     2     32       K544204     O1     SPEADER DRIVING CONARCEST SPACING (2)     2     32			-	54
K541452     LOOPER THREAD TENSION THUMB NUT     16     53       K541453     LOOPER THRCOW-OUT GEAR LOCKING PLUNGER THUMB NUT     18     8       K54301     LOOPER THRCOW-OUT SAFETY LATCH RETAINING RING     10     53       K54304     OOP FEDD COM SAFETY LATCH RETAINING RING     6     7       K54304     OOP FEDD COM SAFETY LATCH RETAINING RING     6     7       K54304     OOP FEDD COM SAFETY LATCH RETAINING RING     6     8       K543034     OOP FEDD COM SAFETY LATCH RETAINING RING     8     50       K543034     OOP FEDD COM SAFETY SAFETY LATCH RETAINING RING     8     50       K543035     OOI NEEDLE THREAD TENSION RELEASING PLATE PIN     8     50       K544203     OOI SPREADER DRIVING CORANK SET SCREW (2)     16     33       K544203     OOI SPREADER DRIVING CANK SET SCREW (2)     12     14       K544203     OOI SPREADER DRIVING CANK SET SCREW (2)     2     34       K544203     OOI SPREADER DRIVING CANK SET SCREW (2)     2     34       K544203     OOI SPREADER DRIVING CONNECTION WASHER     2     45       K544203     OOI SPREADER DR			-	
K541453     LOOPER THROW-OUT GEAR LOCKING PLUNGER THUMB NUT     10     10     10       K543162     TWEEZERS     10     35       K543801 -012     LOOPER THROW-OUT SAFETY LATCH RETAINING RING     10     35       K543804 -004     FEED DOG SHANK SCREW WASHER     10     55       K543804 -004     FEED DET NERAD TENSION RELEASING PLATE SCREW WASHER     10     55       K543804 -002     SPEADER DRIVING ECCENTRIC PIN     6     8       K543835 -003     NEEDLE THREAD TENSION BRACKET SPACING COLLAR (2)     14     22       K543835 -003     LOOPER THREAD TENSION BRACKET SPACING COLLAR (2)     16     33       K544204 -001     SPEADER DRIVING ROCK SHAFT SOREW STUD BALL ROLLER SET SCREW (2)     10     11       K544204 -001     SPEADER DRIVING COANCEST SPACING COLLAR (2)     2     2     2       K544204 -001     SPEADER DRIVING COANCEST SPACING COLLAR (2)     2     3     3       K544204 -005     FEED DRIVING COANCESTER V(2)     2     3     3       K544204 -006     SB SHAFT THRUST COLLAR SET SCREW (2)     4     4     4       K544208 -006     SA ROK FRAM				70
K643162     TWEEZERS     18     8       K543801 - 012     LOOPER THROW-OUT SAFETY LATCH RETAINING RING     10     35       K543801 - 004     FEED DOG SHANK SCREW WASHER     10     57       K543804 - 004     LOOPER HOLDER SCREW WASHER     10     57       K543804 - 004     LOOPER HOLDER SCREW WASHER     10     57       K543805 - 001     SPEADET READ TENSION RELASING FLATE PIN     6     8       K543805 - 001     NEEDLE THREAD TENSION BRACKET SPACING COLLAR (2)     16     32       K544203 - 001     SPEADET RIVEAD TENSION BRACKET SPACING COLLAR (2)     16     32       K544204 - 001     SPEED BAR SET SCREW (2)     12     11     12       K544204 - 001     SPEED DRIVENG CRANK SET SCREW (2)     2     38     6     11       K544204 - 001     SPEED LETING ECOENTRIC CADULAR SET SCREW (2)     2     4     6     6       K544204 - 001     SPEED LETING ECOENTRIC CADULAR SET SCREW (2)     2     38     6     16     34       K544209 - 005     FEED LITING ECOENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     2     35     4     36			-	-
K633801 -012   LOOPER THROW-OUT SAFETY LATCH RETAINING RING   10   33     K633804 -004   KEED DOG SHANK SCREW WASHER   10   9     K633804 -004   LOOPER CHIREAD TENSION RELASING PLATE SCREW WASHER   10   9     K633804 -002   SPREADER DRIVING ECCENTRIC PIN   8   55     K633830 -002   SPREADER DRIVING ECCENTRIC PIN   6   8     K633853 -003   LOOPER THREAD TENSION BRACKET SPACING COLLAR (2)   16   22     K634853 -003   LOOPER THREAD TENSION BRACKET SPACING COLLAR (2)   16   22     K644204 -001   SPREADER DRIVING RACK STAPACING COLLAR (2)   10   15     K644204 -001   SPREADER DRIVING CKANK SET SCREW (2)   2   32     K644204 -005   SPREADER DRIVING CCANK SET SCREW (2)   2   32     K644204 -006   GE ED LAR SET SCREW (2)   2   36     K644204 -006   BED SLART THRUST COLLAR SET SCREW (2)   8   16     K644204 -006   BED SLART THRUST COLLAR SET SCREW (2)   8   6     K644205 -006   BED SLART THRUST COLLAR SET SCREW (2)   2   44     K644205 -006   BED SLART THRUST COLLAR SET SCREW (2)   2   44			-	-
K643894 -004     NEEDLE THREAD TENSION RELASING PLATE SCREW WASHER     10     57       K643894 -004     LOOPER HOLDER SCREW WASHER     10     57       K643895 -001     NEEDLE THREAD TENSION BEACKET SPACING COLLAR (2)     14     26       K643853 -003     LOOPER THREAD TENSION BRACKET SPACING COLLAR (2)     16     30       K644853 -003     LOOPER THREAD TENSION BRACKET SPACING COLLAR (2)     16     30       K644203 -001     FEED BAR SET SCREW (2)     12     14       K644204 -001     FEED BAR SET SCREW (2)     12     14       K644204 -001     SPREADEE DRIVING COCAURA SET SCREW (2)     2     2     38       K644204 -001     SPREADEE DRIVING COCAURA SET SCREW (2)     8     11       K644204 -005     COUNTERBALANCE SET SCREW (2)     2     38       K644205 -005     COUNTERCTION WASHER SCREW (2)     8     8     66       K644206 -005     COUNTERCTION WASHER SCREW (2)     8     8     66       K644210 -006     BAR MSHAT THRUST COLLAR SET SCREW (2)     2     38     46       K644225     MEEDLE BAR COK FRAME DRIVING ECCENTRIC ADUJSTING DISC SPRING COLLAR SET SC				
K643890 - 004     FEED DOG SHANK SCREW WASHER     10     53       K543890 - 002     SPREADER DRIVING ECCENTRIC PIN     8     50       K543890 - 002     SPREADER DRIVING ECCENTRIC PIN     6     8       K543895 - 003     NEEDLE THREAD TENSION BRACKET SPACING COLLAR (2)     14     22       K543895 - 003     LOOPER THREAD TENSION BRACKET SPACING COLLAR (2)     16     33       K544204 - 001     SPREADER DRIVING COCK SHAFT SCREW STUD BALL ROLLER SET SCREW     10     15       K544204 - 001     SPREADER DRIVING COCK SHAFT SCREW (2)     2     33       K544204 - 001     SPREADER DRIVING CCANK SET SCREW (2)     2     35       K544204 - 001     SPREADER DRIVING CCANK SET SCREW (2)     2     35       K544205 - 005     COUNTERBALANCE SET SCREW (2)     2     35       K544205 - 005     EED SHAFT THRUST COLLAR SET SCREW (2)     8     6       K544205 - 005     EED GHARD ROK/ RAME DEMINING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     8     6       K544205 - 045     RED LE BRAR ROK R FRAME DEMINING COCLAR SET SCREW (2)     2     4       K544325     FEED DRIVING CONNECTION SCREW (2)     14 <td></td> <td></td> <td>-</td> <td></td>			-	
K543804 -004     LOOPER HOLDER SCREW WASHER     10     57       K543806 -002     SPREADER DRIVING COCENTRIC PIN     8     50       K34385 -003     NEEDLE THREAD TENSION BLACKET SPACING COLLAR (2)     14     2       K54383 -003     LOOPER THREAD TENSION BRACKET SPACING COLLAR (2)     16     32       K544203 -001     SPREADER DRIVING COCATART SCREW STUD BALL ROLLER SET SCREW     8     56       K544204 -001     SPREADER DRIVING COCATART SCREW (2)     10     15       K544204 -001     SPREADER DRIVING COLARAK SET SCREW (2)     2     32       K544204 -005     COUNTRBALANCE SET SCREW (2)     2     32       K544204 -005     COUNTRBALANCE SET SCREW (2)     2     48       K544203 -005     COUNTRBALANCE SET SCREW (2)     2     48       K544230 -005     BED SHAFT THRUST COLLAR SET SCREW (2)     8     8     8       K544231 -01     LOOPER DRIVING COCATARE SCREW (2)     8     8     8       K544231 -01     LOOPER DRIVING COCATARE SCREW (2)     8     8     8       K544325     NEEDLE BAR CACK FRAME DRIVING COCATRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     8			-	
K543000 -002     SPREADER DRIVING ECCENTRIC PIN     6     8       K543050 -001     NEEDLE THREAD TENSION RELEASING PLATE PIN     6     8       K543050 -003     NEEDLE THREAD TENSION BRACKET SPACING COLLAR (2)     14     22       K543051 -003     LOOPER THREAD TENSION BRACKET SPACING COLLAR (2)     16     32       K544203 -001     SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER SET SCREW     10     16       K544204 -001     SPREADER DRIVING CONSTARK SET SCREW (2)     12     14       K544208 -005     FEED LIFING ECCENTRIC SET SCREW (2)     8     11       K544208 -005     FEED LIFING ECCENTRIC SET SCREW (2)     8     6       K544208 -005     BED SHAFT THRUST COLLAR SET SCREW (2)     8     6       K544208 -005     BED SHART THRUST COLLAR SET SCREW (2)     8     8       K544208 -005     BED SHARME ORVING CONNECTION WASHER SCREW (2)     8     4       K544208 -005     BED KHARE PRIVING CONNECTION SCREW (2)     8     4       K544320     NEEDLE BAR ROK PRAME ORVING SCREW (3)     8     8       K544321     NEEDLE BAR ROK PRIVING CONSCREW (4)     8     8				-
K543850 -001     NEEDLE THREAD TENSION RELASING PLATE PIN     6     6     8       K543853 -003     NEEDLE THREAD TENSION BRACKET SPACING COLLAR (2)     16     30       K544240 -001     SPEADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER SET SCREW     10     15       K544240 -001     FEED BAR SET SCREW (2)     10     15       K544240 -001     SPEADER DRIVING ROCK SHAFT SCREW (2)     2     33       K544240 -005     COUNTERBALANCE SET SCREW (2)     2     35       K544240 -005     COUNTERLAINCE SET SCREW (2)     2     36       K544240 -005     DED SHAFT THRUST COLLAR SET SCREW (2)     2     32       K544250     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     2     32       K544251     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     2     32       K544325     NEEDLE BAR ROCK FRAME DRIVING COLLAR SET SCREW (2)     2     32       K544326     NEEDLE BAR ROCK FRAME DRIVING COLLAR SET SCREW (2)     2     32       K544326     NEEDLE BAR ROCK FRAME DRIVING COLLAR SET SCREW (2)     44     4544334       K544326     ARM SHA				
K543853 -003   NEEDLE THREAD TENSION BRACKET SPACING COLLAR (2)   14   22     K543853 -001   SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER SET SCREW   10   15     K544204 -001   SPREADER DRIVING COCK SHAFT SCREW (2)   10   12     K544204 -001   SPREADER DRIVING CANK SET SCREW (2)   12   14     K544204 -005   SPREADER DRIVING CANK SET SCREW (2)   2   36     K544204 -005   FEED LITING ECCENTRIC SET SCREW (2)   8   11     K544206 -005   FEED LITING ECCENTRIC SET SCREW (2)   8   6     K544207 -005   ARM SHAFT THRUST COLLAR SET SCREW (2)   8   6     K544208 -005   GED SHAFT THRUST COLLAR SET SCREW (2)   8   8     K544207 -005   ARM SHAFT THRUST COLLAR SET SCREW (2)   8   8     K544230 -005   BED SHARD SCREMING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)   2   32     K544325   NEEDLE BAR COCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)   4   4     K544326   NEEDLE BAR COANK POSITION SCREW (2)   14   22   5     K544336   NEEDLE BAR CRANK COVER SCREW (2)   14   32   34     K54435			-	
K543835 -003     LOOPER THREAD TENSION BRACKET SPACING COLLAR (2)     16     35       K544204 -001     SPEADER DRIVING COCK SHAFT SCREW STUD BALL ROLLER SET SCREW     8     55       K544204 -001     SPEADER DRIVING CRANK SET SCREW (2)     12     14       K544204 -001     SPEADER DRIVING CRANK SET SCREW (2)     2     38       K544208 -005     COUNTERBALANCE SET SCREW (2)     2     38       K544209 -005     BED SHAFT THRUST COLLAR SET SCREW (2)     2     38       K544209 -005     BED SHAFT THRUST COLLAR SET SCREW (2)     8     8       K544204 -001     LOOPER DRIVING COLLAR SET SCREW (2)     8     8       K544205 -005     BED SHAFT THRUST COLLAR SET SCREW (2)     8     8       K544325     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     8     8       K544336     ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (6)     14     12     14       K544336     NEEDLE BAR CRANK POSITION SCREW (6)     16     2     5       K544336     NEEDLE BAR CRANK POSITION SCREW (1)     16     16     2       K544307     BED HINGE CONNECTION SCREW (2) </td <td></td> <td></td> <td>-</td> <td>20</td>			-	20
K544203 -001     SPREADER DRIVING ROCK SHAFT SCREW STUD BALL ROLLER SET SCREW     8     56       K544204 -001     SPREADER DRIVING CRANK SET SCREW (2)     12     14       K544204 -001     SPREADER DRIVING CRANK SET SCREW (2)     2     36       K544204 -005     SPREADER DRIVING CRANK SET SCREW (2)     2     36       K544208 -005     FEED LIFTING ECCENTRIC SET SCREW (2)     2     46       K544209 -005     ARM SHAFT THRUST COLLAR SET SCREW (2)     4     46       K544203 -005     BED SHAFT THRUST COLLAR SET SCREW (2)     8     46       K544203 -006     BED SHAFT THRUST COLLAR SET SCREW (2)     8     46       K544235 -005     BED CHREAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     8     46       K544336 - ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)     2     44     4544336       K544351 - MEEDLE DAR CRANK POSITION SCREW CHECK SCREW     16     18     25       K544354 - ARM PLUG     16     16     25       K544357 - ARM PLUG     16     16     25       K544357 - ARM PLUG     16     16     25       K54517 - 452 <t< td=""><td></td><td></td><td></td><td>30</td></t<>				30
K44204 -001     FEED BAR SET SCREW (2)     10     11       K544204 -001     SPREADBER DRIVING CRANK SET SCREW (2)     12     13       K544208 -005     COUNTERBALANCE SET SCREW (2)     8     11       K544208 -005     COUNTERBALANCE SET SCREW (2)     8     11       K544209 -005     BED SHAFT THRUST COLLAR SET SCREW (2)     8     6       K544213 -001     LOOPER RIVING CONNECTION WASHER SCREW     8     6       K54423 - 011     LOOPER RIVING CONNECTION WASHER SCREW     8     6       K544325     FEED DINVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     2     32       K544336     ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)     2     44       K544336     NEEDLE BAR ROCK FRAME DRIVING BCCCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     4     4       K544343     NEEDLE BAR CROCK PRINCING BRACKET SCREW (3)     2     4     4       K544343     NEEDLE BAR CRONK POSITION SCREW CHECK SCREW     18     2     5       K544343     BED HINGE CONNECTION SCREW (4)     18     2     8       K545424     ARM HUG     18     2			-	56
H544204 -001     SPREADER DRIVING CRÄNK SET SCREW (2)     12     14       K544208 -005     COUNTERBALANCE SET SCREW (2)     2     35       K544209 -005     ARM SHAFT THRUST COLLAR SET SCREW (2)     2     45       K544209 -005     BED SHAFT THRUST COLLAR SET SCREW (2)     2     45       K544209 -005     BED SHAFT THRUST COLLAR SET SCREW (2)     8     6       K544213 -001     LOOPER DRIVING CONNECTION WASHER SCREW (2)     8     6       K544325     FEED DRIVING CONNECTION WASHER SCREW (2)     8     4       K544325     FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     8     4       K544336     ARM SHAFT THRUST COLOR SCREW (2)     14     2     4       K544336     NEEDLE THREAD TENSION BRACKET SCREW (2)     14     2     5       K544381     NEEDLE THREAD TENSION BRACKET SCREW (2)     14     2     5       K544351     BED HINGE CONNECTION SCREW (4)     18     2     5       K544354     ARM PLUG     14     2     8     5       K545431     HEDLE BAR RORK RESCREW (0)     16     16			-	19
K644208 -005     COUNTERBALANCE SET SCREW (2)     2     2     3       K644209 -005     ARM SHAFT THRUST COLLAR SET SCREW (2)     2     4       K644209 -005     ARM SHAFT THRUST COLLAR SET SCREW (2)     8     6       K644209 -005     BED SHAFT THRUST COLLAR SET SCREW (2)     8     6       K644201 -001     DOPER DRIVING CONNECTION WASHER SCREW     8     6       K644232     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     8     4       K544336     ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)     2     44       K544336     NEEDLE THREAD TENSION BRACKET SCREW (2)     14     22     5       K544336     NEEDLE BAR CRANK POSITION SCREW CHECK SCREW     2     5       K544338     BED HINGE CONNECTION SCREW (4)     18     22     5       K5443431     BED PLATE SLIDE SPRING SCREW (2)     16     3     6       K54506     BED PLATE SLIDE SPRING SCREW (2)     16     3     6       K545205     451     ILOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)     16     10     22       K545213			-	14
K544209 -005     ARM SHAFT THRUST COLLAR SET SCREW (2)     2     4       K544209 -005     BED SHAFT THRUST COLLAR SET SCREW (2)     8     62       K544213 -001     LOOPER DRIVING CONNECTION WASHER SCREW     8     8       K544225     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     2     3       K544325     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     8     4       K544336     ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)     2     44       K544336     NEEDLE BAR CRANK POSITION SCREW (2)     16     2     5       K544375     ARM PLUG     18     21     5       K544376     BED PLATE SLIDE SPRING SCREW (2)     16     3       K545174     452     FACE PLATE HINGE STUD SET SCREW (2)     16     3       K545174     452     FACE PLATE HINGE STUD SET SCREW (2)     10     10     10       K545205     451     NEEDLE BAR CRANK COVER SCREW (2)     16     10     10     10     10     10     10     10     10     10     10     10			2	35
K644209 -005     BED SHAFT THRUST COLLAR SET SCREW (2)     8     6       K544213 -001     LOOPER DRIVING CONNECTION WASHER SCREW     8     6       K544325     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     3     7       K544325     FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     8     4       K544336     ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)     14     22       K544336     NEEDLE THREAD TENSION BRACKET SCREW (2)     14     22       K544336     NEEDLE BAR ROCK FRAME DRIVING SCREW (2)     14     22       K544336     NEEDLE BAR ROCK FRAME DRIVING SCREW (2)     14     22       K544375     ARM PLUG     18     21       K544375     ARM PLUG     16     3       K545205     451     INDEC PLATE SLIDE SPRING SCREW (2)     16     3       K545213     FEED LIFTING LINK HINGE PIN SET SCREW (2)     10     22       K545244     452     FEED LIFTING LINK HINGE PIN SET SCREW (2)     10     22       K545245     FEED LIFTING LINK HINGE PIN SET SCREW (2)     10     22     24	K544208 -005	FEED LIFTING ECCENTRIC SET SCREW (2)	8	11
K544213 -001     LOOPER DRIVING CONNECTION WASHER SCREW     8     8     8       K544325     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     2     32       K544325     FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     2     44       K544336     ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)     2     44       K544386     NEEDLE THREAD TENSION BRACKET SCREW (2)     14     22       K544375     ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)     18     21       K544376     NEEDLE BAR CRANK POSITION SCREW CHECK SCREW (2)     16     25       K544376     ARM PLUG     18     21     16     25       K544576     ARM PLUG     16     25     16     25     16     26     8     46     26     8     45     26     16     25     16     26     8     36     3645205     451     LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)     10     26     8     36     3645205     451     HEDL LBAR CRANK COVER SCREW (2)     10     26     36     36	K544209 -005	ARM SHAFT THRUST COLLAR SET SCREW (2)	2	49
K544325     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     2     32       K544325     FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     8     46       K544336     ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)     14     22       K544336     NEEDLE THREAD TENSION BRACKET SCREW (2)     14     22       K544381     BEDLE THREAD TENSION BRACKET SCREW (2)     18     21       K544381     BED HINGE CONNECTION SCREW (4)     18     22     5       K544381     BED HINGE CONNECTION SCREW (6)     16     2     5       K544381     BED HATE SLIDE SPRING SCREW (6)     16     3       K54505     ARM PLUG     16     3       K54505     451     NEEDLE BAR CRANK COVER SCREW (2)     16     3       K545205     451     NEEDL FTHROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)     10     20       K545205     FEED LIFTING LINK HINGE FIN SET SCREW     10     22     8       K545205     FEED LIFTING LINK HINGE FIN SET SCREW (2)     16     10     22       K545246     452     RM SID	K544209 -005	BED SHAFT THRUST COLLAR SET SCREW (2)	8	62
K544325     FEED DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)     8     46       K544336     ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)     14     2     141       K544336     NEEDLE THREAD TENSION BRACKET SCREW (2)     14     2     5       K544358     NEEDLE BAR CRANK POSITION SCREW CHECK SCREW     2     5       K544375     ARM PLUG     18     2       K544375     ARM PLUG     16     3       K5445086     BED PLATE SLIDE SPRING SCREW (6)     16     2       K545026     FACE PLATE HINGE STUD SCREW (2)     16     3       K545026     -451     NEEDLE BAR CRANK COVER SCREW (2)     2     8       K545205     -451     LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)     10     22       K545205     -451     LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)     10     22       K545205     451     LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)     16     10       K545206     -452     REB DR COVER SCREW (2)     16     10     22       K545213     FEED LIFTING LINK HINGE	K544213 -001		8	8
K544336   ARM SHAFT BALL BEARING (BACK) HOUSING SCREW (3)   2   44     K544336   NEEDLE THREAD TENSION BRACKET SCREW (2)   14   22     K544336   NEEDLE BAR CRANK POSITION SCREW (2)   18   21     K544381   BED HINGE CONNECTION SCREW (4)   18   21     K544381   BED HINGE CONNECTION SCREW (6)   16   22     K546086   BED PLATE SLIDE SPRING SCREW (6)   16   32     K545008   FACE PLATE SLIDE SPRING SCREW (2)   16   3     K545205   451   NEEDLE BAR CRANK COVER SCREW (2)   10   20     K545205   451   INEEDLE BAR CRANK COVER SCREW (2)   10   20     K545205   451   IOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)   10   20     K545213   FEED LIFTING LINK HINGE PIN SET SCREW   10   20     K545246   452   PEED LIFTING LINK HINGE PIN SET SCREW (2)   16   10     K545247   FEED LIFTING LINK HINGE PIN SET SCREW (2)   16   10   20     K545246   452   FEED DIRVING CONNECTION CAP SCREW (2)   16   12   16   12     K545297   FEED DRIV	K544325	NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC ADJUSTING DISC SPRING COLLAR SET SCREW (2)		32
K544336     NEEDLE THREAD TENSION BRACKÉT SCREW (2)     14     22       K544358     NEEDLE BAR CRANK POSITION SCREW (4)     18     21       K544351     BED HINGE CONNECTION SCREW (4)     18     21       K544351     BED HINGE CONNECTION SCREW (4)     18     21       K544375     ARM PLUG     16     32       K545086     BED PLATE SLIDE SPRING SCREW (2)     16     32       K545205 - 451     NEEDLE BAR CRANK COVER SCREW (2)     2     8       K545205 - 451     LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)     10     20       K545213     FEED LIFTING LINK HINGE PIN SET SCREW     10     20       K545213     FEED LIFTING LINK HINGE PIN SET SCREW     10     20       K545245     -452     ARM SIDE COVER SCREW (3)     16     10       K545247     FEED LIFTING LINK HINGE TON CAP SCREW     16     21       K545249     FEED REGULATING STUD SOCKET SCREW (2)     16     21       K545297     NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW     8     38       K545302     DRIP PAN SCREW (4)     18     1	K544325		8	48
K544358     NEEDLE BAR CRANK POSITION SCREW CHECK SCREW     2     5       K544381     BED HINGE CONNECTION SCREW (4)     18     21       K544757     ARM PLUG     14     6       K544774     452     FACE PLATE SLIDE SPRING SCREW (6)     16     25       K5445086     BED PLATE SLIDE SPRING SCREW (2)     16     3       K545205     -451     NEEDLE BAR CRANK COVER SCREW (2)     10     60       K545205     -451     INEDLE BAR CRANK COVER SCREW (2)     10     60       K545213     FEED LIFTING LINK HINGE PIN SET SCREW     10     22     8       K545245     452     ARM SIDE COVER SCREW (3)     16     10       K545247     FEED LIFTING LINK HINGE PIN SET SCREW     10     22     16     10       K545247     ARED LE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW     16     21     16     10       K545297     FEED DEL BAR ROCK FRAME DRIVING CONNECTION CAP SCREW     4     24     54       K545302     DRIP PAN SCREW (4)     18     18     16       K545439     FEED DRIVING COCK SHAF				41
K544381     BED HINGE CONNECTION SCREW (4)     18     21       K544875     ARM PLUG     14     6       K545086     BED PLATE SLIDE SPRING SCREW (6)     16     28       K54507     451     NEEDLE ARE SLIDE STUD SET SCREW (2)     16     3       K545205     -451     NEEDLE BAR CRANK COVER SCREW (2)     2     8       K545205     -451     LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)     10     60       K545213     FEED LIFTING LINK HINGE PIN SET SCREW     10     22     8       K545246     -452     ARM SIDE COVER SCREW (3)     16     10       K545249     -452     FEED REGULATING STUD SOCKET SCREW (2)     16     10       K545249     -452     FEED REGULATING STUD SOCKET SCREW (2)     16     12       K545297     NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW     8     33       K545302     DRIV PAN SCREW (4)     18     18       K545424     SPREADER DRIVING ROCK SHAFT SCREW STUD NUT     12     17       K545439     LOOPER CARRIER CRANK CLAMPING STUD WASHER     10     16 <				22
K544875     ARM PLUG     14     6       K545086     BED PLATE SLIDE SPING SCREW (6)     16     2       K545174     -452     FACE PLATE HINGE STUD SET SCREW (2)     12     8       K545174     -452     FACE PLATE HINGE STUD SET SCREW (2)     10     60       K545205     -451     LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)     10     60       K545213     FEED LIFTING LINK HINGE PIN SET SCREW     10     22     8       K545213     FEED LIFTING LINK HINGE PIN SET SCREW     10     22       K545246     -452     ARM SIDE COVER SCREW (3)     16     11       K545237     NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW     4     24       K545237     FEED DRIVING CONNECTION CAP SCREW     18     18       K545242     SPREADER DRIVING COCK SHAFT SCREW STUD NUT     12     17       K545424     SPREADER SCREW WASHER     10     10     10       K546907     SPREADER SCREW WASHER     10     55       K549024     NEEDLE BAR CRANK POSITION SCREW     2     4       K549024				5
K545086     BED PLATE SLIDE SPRING SCREW (6)     16     25       K545174     -452     FACE PLATE HINGE STUD SET SCREW (2)     16     3       K545205     -451     LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)     10     66       K545205     -451     LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)     10     22       K545205     -451     LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)     10     22       K545213     FEED LIFTING LINK HINGE PIN SET SCREW     10     22       K545246     -452     ARM SIDE COVER SCREW (3)     16     10       K545247     NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW     4     24       K545207     NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW     8     36       K545302     DRIP PAN SCREW (4)     18     16       K545424     SPREADER DRIVING ROCK SHAFT SCREW STUD NUT     12     17       K5454504     SPREADER DRIVING ROCK SHAFT SCREW STUD NUT     12     10       K545450     OILER     SPREADER CRANK CLAMPING STUD WASHER     10     10       K549024     LOOPER CARNER			-	21
K545174 -452   FACE PLATE HINGE STUD SET SCREW (2)   16   3     K545205 -451   NEEDLE BAR CRANK COVER SCREW (2)   2   8     K545205 -451   LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)   10   60     K545213   FEED LIFTING LINK HINGE PIN SET SCREW   10   22     K545243   FEED LIFTING LINK HINGE PIN SET SCREW   10   22     K545245   -452   ARM SIDE COVER SCREW (3)   16   10     K545297   FEED REGULATING STUD SOCKET SCREW (2)   16   21     K545297   NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW   4   24     K545302   DRIP PAN SCREW (4)   18   18   16     K5454549   FEED DOG SHANK SCREW LOCK NUT   10   10   10     K546906   OILER   SPREADER SCREW WASHER   18   9     K547070   SPREADER SCREW WASHER   10   10   12     K549024   NEEDLE BAR ROCK FRAME POSITION SCREW   2   4     K549024   NEEDLE BAR ROCK FRAME POSITION SCREW   10   12     K549024   FEED DRIVING ROCK FRAME POSITION SCREW (2)   10   12				-
K545205     -451     NEEDLE BAR CRANK COVER SCREW (2)     10     60       K545205     -451     LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)     10     60       K545213     FEED LIFTING LINK HINGE PIN SET SCREW     10     22       K545243     FEED LIFTING LINK HINGE PIN SET SCREW     10     22       K545246     -452     ARM SIDE COVER SCREW (3)     16     10       K545297     NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW     4     22       K545297     FEED DRIVING CONNECTION CAP SCREW     8     32       K545302     DRIP PAN SCREW (4)     18     18       K5454544     SPREADER DRIVING ROCK SHAFT SCREW STUD NUT     12     17       K5454549     FEED DG SHANK SCREW LOCK NUT     10     12     14       K546906     OILER     10     12     4       K5469024     NEEDLE BAR CRANK CLAMPING STUD WASHER     10     12       K549024     NEODER CARRIER CRANK CLAMPING STUD WASHER     10     12       K549024     NEEDLE BAR CRANK POSITION SCREW     10     12       K549024				25
K545205 -451     LOOPER THROW-OUT SAFETY LATCH SPRING BRACKET SCREW (2)     10     60       K545213     FEED LIFTING LINK HINGE PIN SET SCREW     10     20       K545213     FEED LIFTING LINK HINGE PIN SET SCREW     10     22       K545246     ARM SIDE COVER SCREW (3)     16     10       K545297     NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW     4     22       K545202     DRIP PAN SCREW (4)     18     18       K545302     DRIP PAN SCREW (4)     18     18       K545424     SPREADER DRIVING ROCK SHAFT SCREW STUD NUT     12     17       K545424     SPREADER DRIVING ROCK SHAFT SCREW STUD NUT     12     17       K5454544     SPREADER DRIVING ROCK SHAFT SCREW STUD NUT     12     17       K5454545     JOOPER CARRIER CRANK CLAMPING STUD WASHER     10     10       K544501     LOOPER CARRIER CRANK CLAMPING STUD WASHER     10     12       K549024     NEEDLE BAR ROCK FRAME POSITION SCREW     2     4       K549024     NEEDLE BAR ROCK FRAME POSITION SCREW (2)     10     12       K549024     LOOPER CARRIER SHAFT BUSHING POSITION SCREW				
K545213     FEED LIFTING LINK HINGE PIN SET SCREW     10     20       K545213     FEED LIFTING LINK HINGE PIN SET SCREW     10     28       K545213     FEED LIFTING LINK HINGE PIN SET SCREW     10     28       K545246     -452     ARM SIDE COVER SCREW (3)     16     10     21       K545249     -452     FEED REGULATING STUD SOCKET SCREW (2)     16     21       K545297     NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW     4     24       K545302     DRIP PAN SCREW (4)     18     18     18       K545424     SPREADER DRIVING ROCK SHAFT SCREW STUD NUT     12     17       K545489     FEED DOG SHANK SCREW LOCK NUT     12     17       K545490     OILER     18     9       K547670     SPREADER SCREW WASHER     10     55       K549024     NEEDLE BAR CRANK CLAMPING STUD WASHER     10     12       K549024     NEEDLE BAR ROCK FRAME POSITION SCREW     10     12       K549024     FEED DRIVING ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND     2     33       K60003 <td></td> <td></td> <td></td> <td>-</td>				-
K545213     FEED LIFTING LINK HINGE PIN SET SCREW     10     225       K545246     -452     ARM SIDE COVER SCREW (3)     16     10       K545249     -452     FEED REGULATING STUD SOCKET SCREW (2)     16     21       K545297     NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW     4     24       K545297     FEED DRIVING CONNECTION CAP SCREW     8     35       K545302     DRIP PAN SCREW (4)     18     18       K545424     SPREADER DRIVING ROCK SHAFT SCREW STUD NUT     12     17       K545430     FEED DOG SHANK SCREW LOCK NUT     10     10       K546006     OILER     18     9       K547670     SPREADER SCREW WASHER     10     55       K549024     NEEDLE BAR CRANK POSITION SCREW     2     4       K549024     NEEDLE BAR ROCK FRAME POSITION SCREW     10     12       K54003     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND     2     3       K549024     LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)     10     45       K50003     FEED DRIVING ECCENTRIC COMPLETE,			-	
K545246 -452   ARM SIDE COVER SCREW (3)   16   10     K545249 -452   FEED REGULATING STUD SOCKET SCREW (2)   16   21     K545297   NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW   4   24     K545297   FEED DRIVING CONNECTION CAP SCREW   8   35     K545302   DRIP PAN SCREW (4)   18   18     K545424   SPREADER DRIVING ROCK SHAFT SCREW STUD NUT   12   17     K545439   FEED DOG SHANK SCREW LOCK NUT   10   10     K545406   OILER   18   9     K5454024   NEEDLE BAR CRANK CLAMPING STUD WASHER   12   4     K5454024   NEEDLE BAR CRANK CLAMPING STUD WASHER   10   52     K549024   NEEDLE BAR CRANK POSITION SCREW   2   4     K549024   FEED DRIVING ROCK FRAME POSITION SCREW (2)   10   12     K549024   LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)   10   44     K549024   LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)   10   44     K549024   LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)   10   44     K60003   REEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, N				
K545249-452FEED REGULATING STUD SOCKET SCREW (2)1621K545297NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW424K545297FEED DRIVING CONNECTION CAP SCREW836K545297FEED DRIVING CONNECTION CAP SCREW1818K545302DRIP PAN SCREW (4)1217K545424SPREADER DRIVING ROCK SHAFT SCREW STUD NUT1217K545489FEED DOG SHANK SCREW LOCK NUT1010K546906OILER189K547670SPREADER SCREW WASHER124K548024NEEDLE BAR CRANK CLAMPING STUD WASHER1055K549024NEEDLE BAR CRANK POSITION SCREW1012K549024LOOPER CARRIER CRANK CLAMPING POSITION SCREW1012K549024LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)1049K549024LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)1049K549024NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND233KE0003FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K415073836KE0004REDLE BAR ROCK FRAME DRIVING ECCENTRIC221KE0004FEED DRIVING ECCENTRIC844KN3260-01 -22NEEDLE (62X57) SIZE 22412				
K545297NEEDLE BAR ROCK FRAME DRIVING CONNECTION CAP SCREW424K545297FEED DRIVING CONNECTION CAP SCREW835K545302DRIP PAN SCREW (4)1818K545424SPREADER DRIVING ROCK SHAFT SCREW STUD NUT1217K545489FEED DOG SHANK SCREW LOCK NUT1010K546906OILER189K547670SPREADER SCREW WASHER1055K549024NEEDLE BAR CRANK POSITION SCREW24K549024FEED DRIVING ROCK FRAME POSITION SCREW1012K549024FEED DRIVING ROCK FRAME POSITION SCREW (2)1012K549024LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)1048K549024LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)1048K60003REEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND233KE0003FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND234KE0004FEED DRIVING ECCENTRIC224KE0004FEED DRIVING ECCENTRIC3444KN3260-01 -22NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC844KN3260-01 -22NEEDLE (62X57) SIZE 22412			-	-
K545297FEED DRIVING CONNECTION CAP SCREW833K545302DRIP PAN SCREW (4)1818K545424SPREADER DRIVING ROCK SHAFT SCREW STUD NUT1217K545489FEED DOG SHANK SCREW LOCK NUT1010K546906OILER189K547670SPREADER SCREW WASHER124K548459LOOPER CARRIER CRANK CLAMPING STUD WASHER1055K549024NEEDLE BAR CRANK POSITION SCREW24K549024NEEDLE BAR CRANK POSITION SCREW1012K549024LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)1042K549024LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)1042K549024LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)1042K60003NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND233KE0003FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND234KE0004FEED DRIVING ECCENTRIC221KE0004FEED DRIVING ECCENTRIC221KE0004FEED DRIVING ECCENTRIC844KN3260-01 -22NEEDLE (62X57) SIZE 22412				
K545302     DRIP PAN SCREW (4)     18     18     18       K545302     DRIP PAN SCREW (4)     12     17       K545424     SPREADER DRIVING ROCK SHAFT SCREW STUD NUT     12     17       K545429     FEED DOG SHANK SCREW LOCK NUT     10     10       K546906     OILER     18     9       K547670     SPREADER SCREW WASHER     12     4       K548459     LOOPER CARRIER CRANK CLAMPING STUD WASHER     10     55       K549024     NEEDLE BAR CRANK POSITION SCREW     2     4       K549024     FEED DRIVING ROCK FRAME POSITION SCREW     10     12       K549024     LOOPER CARRIER SHAFT BUSHING POSITION SCREW     10     12       K549024     LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)     10     42       K549024     LOOPER CARRIER SHAFT BUSHING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND     2     33       KE0003     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K415073     8     36       KE0004     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC     2     21     21       K				
K545424     SPREADER DRIVING ROCK SHAFT SCREW STUD NUT     12     17       K545424     SPREADER DRIVING ROCK SHAFT SCREW STUD NUT     10     10     10       K545489     FEED DOG SHANK SCREW LOCK NUT     10     10     10       K546906     OILER     18     9       K547670     SPREADER SCREW WASHER     12     4       K549024     LOOPER CARRIER CRANK CLAMPING STUD WASHER     10     55       K549024     NEEDLE BAR CRANK POSITION SCREW     2     4       K549024     FEED DRIVING ROCK FRAME POSITION SCREW     10     12       K549024     LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)     10     42       K549024     LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)     10     42       KE0003     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND     2     33       KE0003     FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K415073     8     36       KE0004     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC     2     21     21       KE0004     FEED DRIVING ECCENTRIC     2     21			-	
K545489     FEED DOG SHANK SCREW LOCK NUT     10     10     10     10       K546906     OILER     18     9       K547670     SPREADER SCREW WASHER     12     4       K548690     LOOPER CARRIER CRANK CLAMPING STUD WASHER     10     55       K549024     NEEDLE BAR CRANK POSITION SCREW     2     4       K549024     FEED DRIVING ROCK FRAME POSITION SCREW     10     12       K549024     LOOPER CARRIER SHAFT BUSHING POSITION SCREW     10     12       K549024     LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)     10     49       K549024     LOOPER CARRIER SHAFT BUSHING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND     2     3       KE0003     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND     2     3       KE0004     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC     2     2     2       KE0004     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC     2     2     2       KE0004     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC     2     2     2       KE0004     FEED DRIVING ECCENTRIC <td< td=""><td></td><td>SPREADER DRIVING ROCK SHAFT SCREW STUD NUT</td><td></td><td>17</td></td<>		SPREADER DRIVING ROCK SHAFT SCREW STUD NUT		17
K546906OILER189K547670SPREADER SCREW WASHER124K547670SPREADER SCREW WASHER10K548459LOOPER CARRIER CRANK CLAMPING STUD WASHER10K549024NEEDLE BAR CRANK POSITION SCREW2K549024FEED DRIVING ROCK FRAME POSITION SCREW10K549024LOOPER CARRIER SHAFT BUSHING POSITION SCREW10K549024LOOPER CARRIER SHAFT BUSHING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND2KE0003NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND2KE0004FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K4150738KE0004NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC2KE0004FEED DRIVING ECCENTRIC2KE0004FEED DRIVING ECCENTRIC8KN3260-01 -22NEEDLE (62X57) SIZE 224				10
K547670SPREADER SCREW WASHER124K548459LOOPER CARRIER CRANK CLAMPING STUD WASHER1055K549024NEEDLE BAR CRANK POSITION SCREW24K549024FEED DRIVING ROCK FRAME POSITION SCREW1012K549024LOOPER CARRIER SHAFT BUSHING POSITION SCREW1012K549024LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)1049KE0003NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND233KE0003FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K415073836KE0004NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC221KE0004FEED DRIVING ECCENTRIC844KN3260-01 -22NEEDLE (62X57) SIZE 22412				9
K548459LOOPER CARRIER CRANK CLAMPING STUD WASHER1055K549024NEEDLE BAR CRANK POSITION SCREW24K549024FEED DRIVING ROCK FRAME POSITION SCREW1012K549024LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)1049KE0003NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND233KE0003FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K415073834KE0004NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC221KE0004FEED DRIVING ECCENTRIC844KN3260-01 -22NEEDLE (62X57) SIZE 22412				4
K549024NEEDLE BAR CRANK POSITION SCREW24K549024FEED DRIVING ROCK FRAME POSITION SCREW1012K549024LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)1049KE0003NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND233KE0003FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K415073836KE0004NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC221KE0004FEED DRIVING ECCENTRIC221KE0004FEED DRIVING ECCENTRIC844KN3260-01 -22NEEDLE (62X57) SIZE 22412				55
K549024FEED DRIVING ROCK FRAME POSITION SCREW1012K549024LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)1049KE0003NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND233KE0003FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K415073836KE0004NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC221KE0004NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC221KE0004FEED DRIVING ECCENTRIC844KN3260-01 -22NEEDLE (62X57) SIZE 22412				4
K549024 KE0003LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)1049KE0003NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND233KE0003FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K415073836KE0004NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC221KE0004FEED DRIVING ECCENTRIC221KE0004FEED DRIVING ECCENTRIC844KN3260-01 -22NEEDLE (62X57) SIZE 22412				12
K415073     KE0003     FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K415073     8     36       KE0004     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC     2     21       KE0004     FEED DRIVING ECCENTRIC     8     44       KN3260-01 -22     NEEDLE (62X57) SIZE 22     4     12	K549024	LOOPER CARRIER SHAFT BUSHING POSITION SCREW (2)	10	49
KE0003     FEED DRIVING ECCENTRIC COMPLETE, NOS. KE0004, K268065, K268066, K412011 AND K415073     8     36       KE0004     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC     2     21       KE0004     FEED DRIVING ECCENTRIC     8     44       KN3260-01 -22     NEEDLE (62X57) SIZE 22     4     12	KE0003		2	33
KE0004     NEEDLE BAR ROCK FRAME DRIVING ECCENTRIC     2     21       KE0004     FEED DRIVING ECCENTRIC     8     44       KN3260-01 -22     NEEDLE (62X57) SIZE 22     4     12			<u> </u>	
KE0004     FEED DRIVING ECCENTRIC     8     44       KN3260-01 -22     NEEDLE (62X57) SIZE 22     4     12				36
KN3260-01 -22 NEEDLE (62X57) SIZE 22 4 12				21
			-	44
KN3260-01 -22 NEEDLE (62X57) SIZE 22 (5)				12
	KN3260-01 -22	NEEDLE (62X57) SIZE 22 (5)	18	10

#### KAMBARA Engineering Co., Ltd. 2 -10 -4 Izumigaoka

2 -10 -4 Tzumigaoka Utsunomiya, Tochigi, Japan TEL: 81 -28 -683 -6636 FAX: 81 -28 -683 -6638 Printed in Japan